WD8122CVD
WD8122CVB
WD8122CVW
WD8122CVC

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at

www.samsung.com/global/register

SAMSUNG

WD8122CVB-02574P_EN.indd 1 2008-06-05 ø¿»ƒ 2:29:08

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Diamond Drum - A More Powerful Wash Performance while Protecting your Fabric**

  Provides a much better wash performance than normal drum washers, by using the wash board effect created by the waves of the inside drum.

- **Ball Balance - Enjoy the Silence! No Noise, No Vibrations**

  Reduced vibrations and noise through the use of a Ball Balance system which maintains near perfect drum balance.

- **Customizable Economic Function - Water, Time and Power Saving**

  Detects the laundry weight in 7 steps and reduces water, time and power consumption.

- **Air Wash - Sterilization and Deodorization without Water!**

  Refresh your favorite clothing simply by using air after you've been at a party or have gone out (food, cigarettes). Non-stained clothing no longer needs to be washed, simply refresh them using the 4 available cycles for different fabrics.

- **Silver Wash - Sterilization and Anti-bacteria Effect with Cold Water Only**

  The winning combination! Samsung's silver technology combines the sanitizing effect of silver with state-of-the-art science for the ultimate in clean. Two plates of pure silver are converted into silver ions through electrolysis. Even in cold, bleach-less water, the silver particles remove odor-causing bacteria for a "super clean" wash. So washing in cold water is energy efficient and better for your clothes.

- **Direct Drive Motor**

  As the drum does not utilize belts or gears, vibrations are reduced significantly. This feature ensures that your washer machine is quieter and more durable.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine.
  This safety feature stops your children from playing with the washing machine, and alerts you when it is activated.

WD8122CVB-02574P_EN.indd 2 2008-06-05 ø¿»ƒ 2:29:09

- **Delay End**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Wool Certified**

  The machine has been tested and has passed the required Woolmark Company specifications for machine washable wool products.
  Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

- **Digital Graphic Display**

  The Digital Graphic Display (control panel) is clear and easy to use for minimum fuss and hassle. And while it is easy to use, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- **Wide door**

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The Troubleshooting section on page 29 tells you what to do if something goes wrong with your new washing machine.

WD8122CVB-02574P_EN.indd 3 2008-06-05 ø¿»ƒ 2:29:09

safety information

Throughout this manual, you'll see Warning ⚠ and Caution ⚠ notes. These warnings, cautions, and the important safety instructions that follow do not cover all possible conditions and situations that may occur. It's your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washing machine. Samsung is not liable for damages resulting from improper use.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury or death**.
⚠ **CAUTION**	Hazards or unsafe practices that may result in **minor personal injury or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washing machine, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

Install and store your washing machine inside, away from exposure to weather.

Install and level your washing machine on a floor that can support its weight.

Your washing machine must be properly grounded. Never plug it into an ungrounded outlet.

WD8122CVB-02574P_EN.indd 4 2008-06-05 ø¿»ƒ 2:29:11

To reduce the risk of fire or explosion:

- Do not wash items that have been washed, soaked, or treated with gasoline, dry cleaning solvents, or other flammable or explosive substances. They give off vapors that could ignite or explode. Rinse by hand any material that has been exposed to cleaning solvent or other flammable liquids or solids before putting in your washing machine. Be sure that all traces of such liquids, solids, and fumes have been removed. Dangerous substances include acetone, denatured alcohol, gasoline, kerosene, certain liquid household cleaners and spot removers, turpentine, waxes, and wax removers.
- Do not put gasoline, dry cleaning solvents, or other flammable or explosive substances into the washing machine.
- Under certain conditions, hydrogen gas may be produced in a hot water system–such as your hot water heater -- that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time.

Ventilate immediately without touching the power plug if there is a gas leak.

Unplug the power cord before servicing your washing machine.

Before each wash, empty the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal metal.

Do not open the door of the washing machine if you can still see water. Check that the water has drained before opening the door.

Do not repair, replace, or service any part of your washing machine yourself unless you fully understand the recommended user–repair instructions and have the skills to carry them out. Work done by an unauthorized person may void your warranty.

Connect the washing machine to the water mains using the new set of hoses. Do not reuse the old set of hoses.

Water inlet hoses deteriorate over time. Check the hoses periodically for bulges, kinks, cuts, wear, and leaks, and replace them as needed and at least every five years.

Packing materials can be dangerous to children; keep all packing material (plastic bags, polystyrene, etc.) well out of the reach of children.

All packaging and shipping bolts must be removed before the appliance is used. Serious damage may occur if they are not removed. See “Removing the shipping bolts”.

Before washing clothes for the first time, you must run a complete cycle without clothes. See “Washing for the first time”.

WD8122CVB-02574P_EN.indd 5 2008-06-05 ø¿»ƒ 2:29:11

safety information

The appliance is designed for home use only.

WARNING Make sure that water and electrical connections are made by qualified technicians, observing the manufacturer's instructions (see "Installing the Washing Machine") and local safety regulations.

Before cleaning or carrying out maintenance, unplug the appliance from the electrical outlet.

Always unplug the appliance and turn off the water after use.

Make sure that the pockets of all clothing to be washed are empty.

Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Never allow pets and children to play on or in the appliance. It may cause injury or suffocate them.

The glass door becomes very hot during the washing cycle. Never touch on the glass door while it is in use.

Do not attempt to repair the appliance yourself. Repairs made by inexperienced or unqualified persons may cause injury and/or make more serious repairs to the appliance necessary.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should only be serviced by our authorized service center, and only rated spare parts should be used.

WARNING Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

To use this appliance safely, the user should become familiar with the instructions for operation of the appliance and always take extra care when using it.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

Do not use processed water containing oil, cream or lotion, which is usually found in skincare shops or massage clinics.

- Otherwise this will cause the packing to be deformed, which causes a malfunction or water leak.

WD8122CVB-02574P_EN.indd 6 2008-06-05 ø¿»ƒ 2:29:11

A stainless washing tub does not usually rust. However if some metal such as a hair pin is left in the tub for an extended time, the tub could rust.

- Do not leave water or bleach containing chlorine in the tub for an extended period of time.
- Do not regularly use or leave water containing iron in the tub for an extended period of time. If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge or soft cloth to clean it. (Under no circumstances use a metal brush)

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

WD8122CVB-02574P_EN.indd 7 2008-06-05 ø¿»ƒ 2:29:11

contents

SETTING UP YOUR WASHING MACHINE 9

9 Checking the parts and the control panel
10 Meeting installation requirements
10 Electrical supply and grounding
10 Water Supply
11 Drain
11 Flooring
11 Surrounding temperature
11 Alcove or closet installation
11 Installing your washing machine

WASHING A LOAD OF LAUNDRY 17

17 Washing for the first time
17 Basic instructions
18 Using the control panel
20 Child lock
20 Delay end
20 Stop&Add
21 Air wash
22 Washing clothes using cycle selector
23 Washing clothes manually
25 Detergent and additives information
25 Which detergent to use
25 Detergent drawer

CLEANING AND MAINTAINING YOUR WASHING MACHINE 26

26 Draining the washing machine in an emergency
26 Cleaning the exterior
27 Cleaning the detergent drawer and drawer recess
27 Cleaning the debris filter
28 Cleaning the water hose mesh filter
28 Repairing a frozen washing machine
28 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 29

29 Check these points if your washing machine...
30 Information codes

CYCLE CHART 31

31 Cycle chart

APPENDIX 32

32 Fabric care chart
32 Protecting the environment
32 Declaration of conformity
33 Specifications

WD8122CVB-02574P_EN.indd 8 2008-06-05 ø¿»ƒ 2:29:11

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS AND THE CONTROL PANEL

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

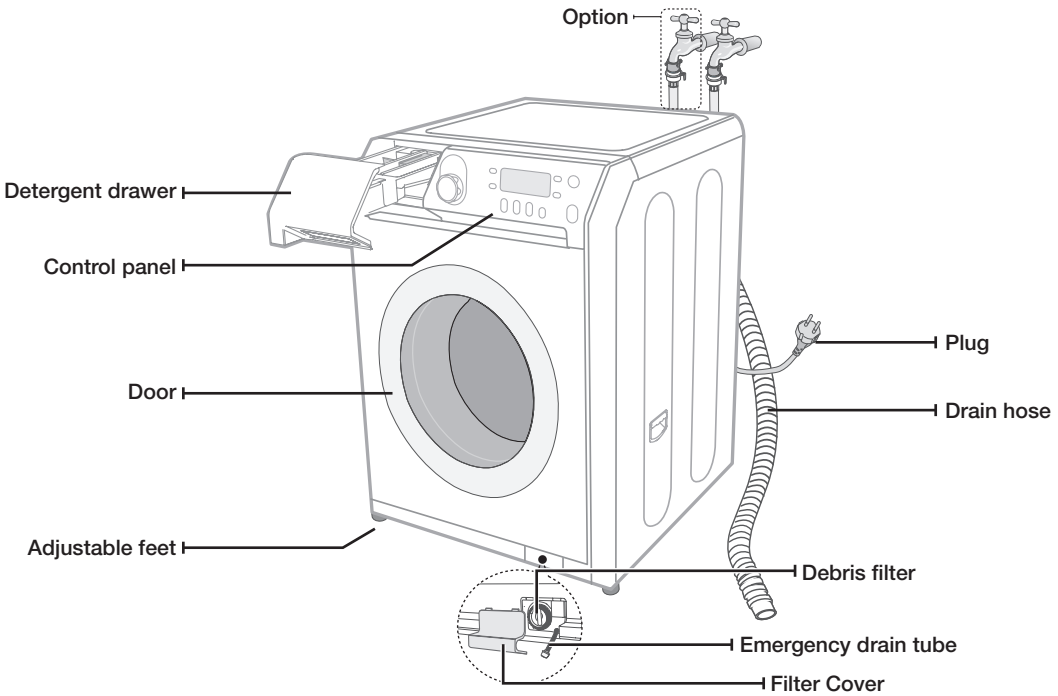

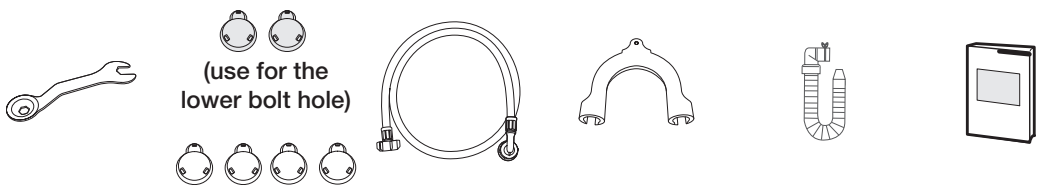

Spanner | Bolt hole covers | Water supply hose | Hose guide | Drain hose | User manual

WD8122CVB-02574P_EN.indd 9 2008-06-05 ø¿»ƒ 2:29:12

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- 220V~240V 50Hz 15 AMP fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.
Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305 cm) long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WD8122CVB-02574P_EN.indd 10 2008-06-05 ø¿»ƒ 2:29:13

Drain

Samsung recommends a standpipe height of 18 in (46 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components. You should always use your washing machine when the surrounding temperature is at least 60 ˚F (16 ˚C).

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm (1 in)	Rear – 51 mm (2 in)
Top – 25 mm (1 in)	Front – 465 sq.cm (72 sq.in.)

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 72 sq. in. (465 sq. cm) unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 ˚F or 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WD8122CVB-02574P_EN.indd 11 2008-06-05 ø¿»ƒ 2:29:13

setting up your washing machine

STEP 2

Removing the shipping bolts

Before installing the washing machine, you must remove the five shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

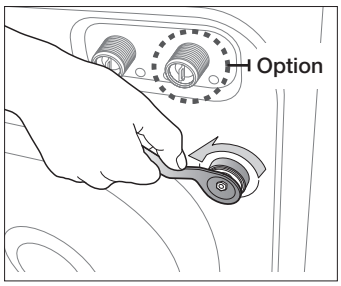

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

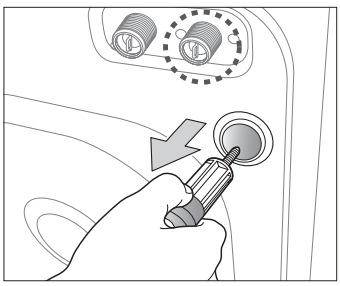

3. Fill the holes with the supplied plastic covers.

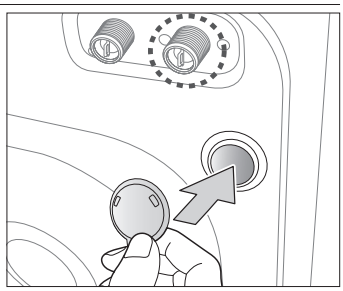

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WD8122CVB-02574P_EN.indd 12 2008-06-05 ø¿»ƒ 2:29:14

STEP 3
Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washer by turning the adjustable nut, as shown in the figure.

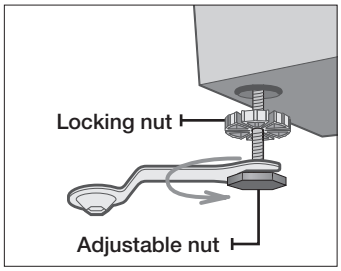

3. When your washing machine is level, tighten the locking nut using the (-) screwdriver.

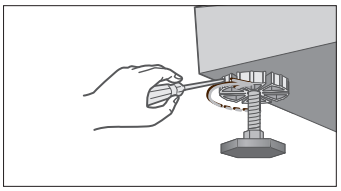

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

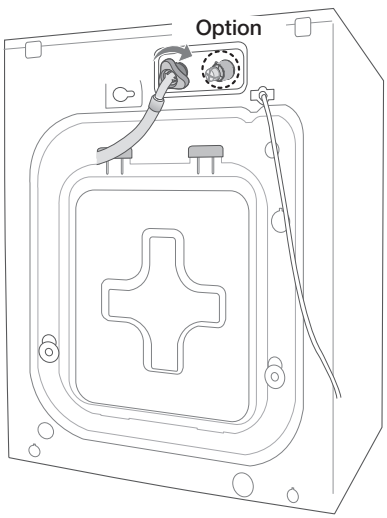

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WD8122CVB-02574P_EN.indd 13 2008-06-05 ø¿»ƒ 2:29:14

setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

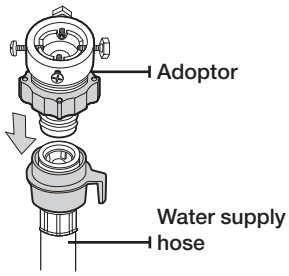

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

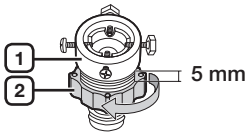

3. Connect the adaptor to the water tap by tightening the screws firmly. Turn part (2) following the arrow and connect (1) and (2).

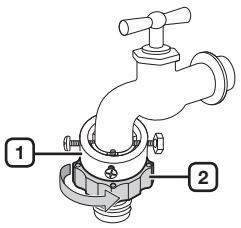

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

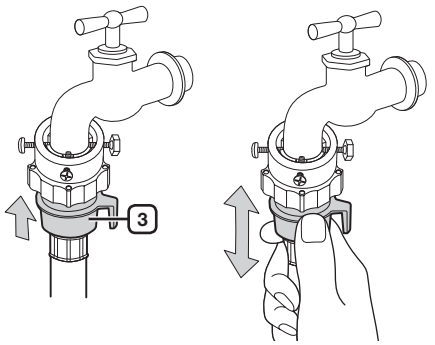

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

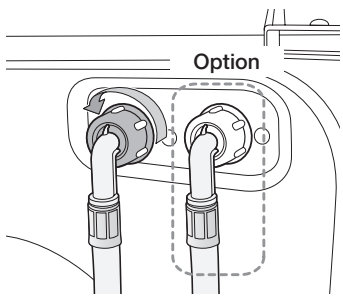

WD8122CVB-02574P_EN.indd 14 2008-06-05 ø¿»ƒ 2:29:16

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

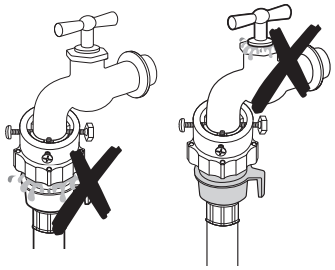

WARNING Do not use your washing machine if there is a water leak. This may cause electrical shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

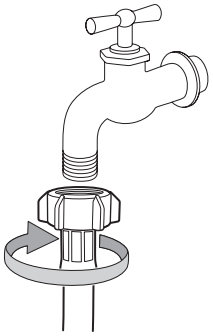

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

WD8122CVB-02574P_EN.indd 15 2008-06-05 ø¿»ƒ 2:29:16

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

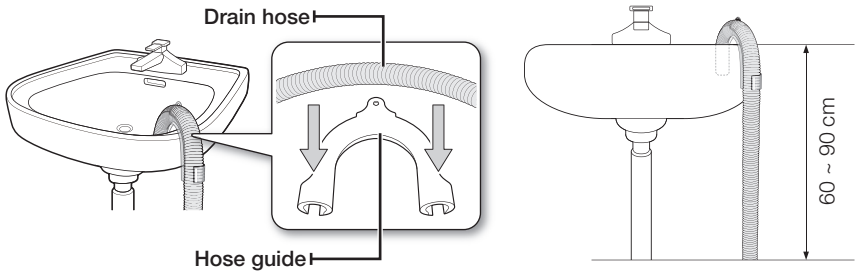

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

STEP 5
Powering your washing machine

Plug the power cord into a wall sockets, a 230 volt 50 Hz approved electrical outlet protected by a 15-amp fuse or comparable circuit breaker. (For more information on electrical and grounding requirements, see page 10.)

WD8122CVB-02574P_EN.indd 16 2008-06-05 ø¿»ƒ 2:29:17

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

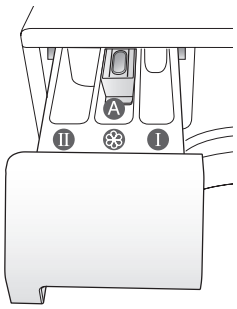

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.
Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 24.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WD8122CVB-02574P_EN.indd 17 2008-06-05 ø¿»ƒ 2:29:19

washing a load of laundry

USING THE CONTROL PANEL

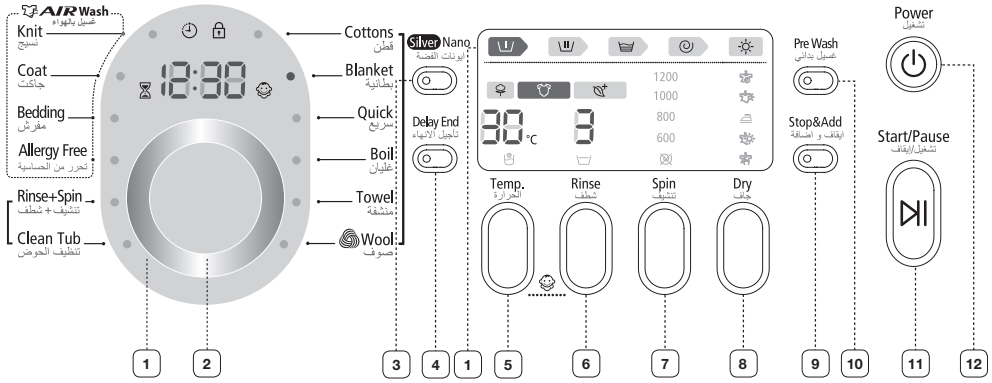

1 DIGITAL GRAPHIC DISPLAY	Displays the remaining wash cycle time, all cycle information, and error messages.
2 CYCLE SELECTOR	Select the tumble pattern and spinning speed for the cycle. For detailed information, refer to “Washing clothes using the cycle selector”. **Cotton** - For averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. **Blanket** - Cotton bedding, bed linen, bed sheet, duvet cover, pillow cover etc. **Quick** - This course is used for small amounts of laundry, relatively clean laundry, or frequently used laundry in a short period of time. **Boil** - This course is used to wash everyday items such as underwear. It cleans heavily soiled items and also performs sterilization. **Towel** - This course is useful for washing towels effectively. **Wool** - Only for machine-washable wool. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0509 (Certificate Number issued by IWS NOM INEE Co., Ltd.) **Air Wash** - This course is useful for removing bad odors. Turning the **Cycle Selector** cycles through the following operating modes. Knit → Coat → Bedding → Allergy Free **Rinse + Spin** - This is useful for laundry that only needs rinsing for adding fabric softener that is added during a rinse. **Clean Tub** - Use this function to maintain wash tub clean and sanitary.
3 SILVER NANO SELECTION BUTTON	Silver Nano water is supplied during the wash cycle as well as during the last rinse cycle, removing bacteria as well as giving protection from bacterial growth for up to one month.
4 DELAY END SELECTION BUTTON	Press this button repeatedly to cycle through the available Delay End options (max 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.

WD8122CVB-02574P_EN.indd 18 2008-06-05 ø¿»ƒ 2:29:20

5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ˚C, 40 ˚C, 60 ˚C, 75 ˚C and 95 ˚C).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. "No spin" - The laundry remains in the drum and no spin cycle is performed after the final drain.
8 **DRY SELECTION BUTTON**	Pressing the button cycles through the following options. Normal → Extra → Iron → Light → Time (30min → 1:00min → 1:30min → 2:00min → 2:30min) "Normal" - Select to dry laundry automatically by detecting the amount and weight of the laundry. Select this to dry cotton clothing such as cotton trousers, T-shirts, and cotton underwear. "Extra" - Select this to dry cotton clothing completely. (Thick clothes such as blue jeans, towels, sports clothes, etc.) "Iron" - Finishes the dry cycle in a moist state appropriate for Ironing. "Light" - Dry clothing which may become deformed at high temperatures at a low temperature. (Mixed fabrics and synthetic fibers such as polyester and nylon.) "Time" - Dry the laundry for the specified period of time. • You must avoid washing laundry that may not be dried as it may be deformed even at low temperatures. • The Normal, Extra, Iron and Light Dry options detect the weight of the laundry in order to display an accurate drying time and dry them more completely. • The drying conditions may differ depending on the type and the amount of laundry.
9 **STOP&ADD SELECTION BUTTON**	Select this to add the laundry amid the process (See "Stop&Add" on page 20).
10 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash means a preliminary wash that is performed for 10 minutes before the main wash. Pre-wash is effective for highly soiled laundry. Pre-wash is only available for: Cottons, Blanket, Boil, and Towel.
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WD8122CVB-02574P_EN.indd 19 2008-06-05 ø¿»ƒ 2:29:21

washing a load of laundry

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

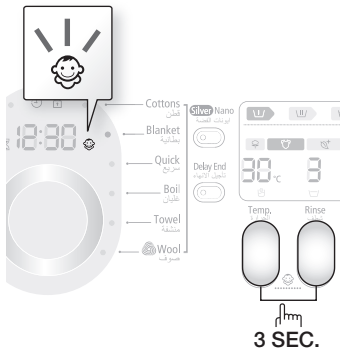

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of max 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

Stop&Add

When the washing machine is working, the door is locked, and the "Stop&Add" lamp is off, you will not be able to add laundry. You can only add laundry when the Stop&Add lamp is illuminated.

1. Press the **Stop&Add** button.
   The washing machine will automatically pause.
2. Wait about 30 seconds and check the state of "Stop&Add" lamp.
   - Blinking: The water in the washing machine is drained down to the safety level for the additional laundry to be added.
   - Off: Adding laundry is possible.
3. Add the laundry.
4. Press the **Start/Pause** button.

- Avoid adding laundry when the machine has foamed up or is filled with water. Otherwise, the foam or water may leak from the door. Check before opening the door.
- We recommend that you select the Stop&Add function 5 minutes before a cycle is performed.
- If the internal temperature is higher than 55 ˚C during the wash cycle or 70 ˚C during the drying cycle, the Stop&Add function cannot be selected.

WARNING
- Do not open the door by force as it may result in injury or damage the washer.

WD8122CVB-02574P_EN.indd 20 2008-06-05 ø¿»ƒ 2:29:23

Air wash

Air wash can refresh laundry without using water owing to its powerful airing system. Clothing that can be refreshed includes woolen coats, cotton or down jumpers, sweaters and suits. (Two items or less (less then 1 kg))

1. Open the door, place the laundry into the washer and close the door.
2. Press the **Power** button.
3. Select **Air wash** by turning the **Cycle Selector**.
   - Turn the **Cycle Selector** to cycle through the following programs: Knit, Coat, Bedding, Allergy Free, ...

MODE	CYCLE TIME
Knit	20 min
Coat	26 min
Bedding	40 min
Allergy Free	1:18 min

   - **Allergy Free**: Select this program to sterilize your laundry, for example against ticks. Since the temperature rises above 90 ˚C, clothes susceptable to heat may be deformed or damaged.
   - **Bedding**: This program includes cotton bedding. However, nylon laundry may become deformed or damaged.
   - You may experience heat when touching laundry after the **Air wash** course is complete. (Average 40 ˚C ~ 48 ˚C)
   - When one of these options has been selected, no other button can be selected and you can only select a maximum delay end time of 19 hours.
4. Close the door and press the **Start/Pause** button.

- When there is water in the tub, **Air wash** cannot be selected. Drain the water and select **Air wash**.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with Air wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).

Avoid Air Washing the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.

Avoid using the following clothes for the **Allergy Free** program:

- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets

WD8122CVB-02574P_EN.indd 21 2008-06-05 ø¿»ƒ 2:29:24

washing a load of laundry

Washing clothes using cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cottons, Boil, Towel, and Blanket cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cottons, Blanket, Quick, Boil, Towel, Wool, Rinse+Spin, Clean Tub. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

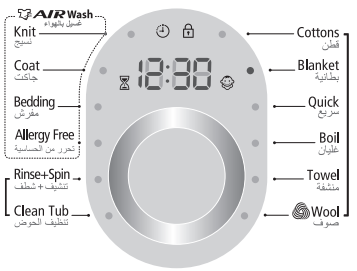

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WD8122CVB-02574P_EN.indd 22 2008-06-05 ø¿»ƒ 2:29:24

Washing clothes manually

You can wash clothes manually without using the **Cycle Selector**.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature.
   (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 75 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   The rinse hold function allows you to remove items that are still wet from the washing machine. (: Rinse hold, : No spin)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (max 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

WD8122CVB-02574P_EN.indd 23 2008-06-05 ø¿»ƒ 2:29:24

washing a load of laundry

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Wool cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WD8122CVC / WD8122CVD/ WD8122CVB / WD8122CVW
Cotton	12.0 kg
Boil	6.0 kg
Towel / Quick	5.0 kg
Blanket	1 sheet [Within 3 kg]
Wool	4.0 kg
Dry	7.0 kg

When the laundry is unbalanced ("UE" lights up on the display), redistribute the load.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

WD8122CVB-02574P_EN.indd 24 2008-06-05 ø¿»ƒ 2:29:25

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do NOT open the detergent drawer when your washing machine is running.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required.
4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

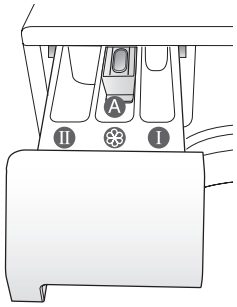

When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.)

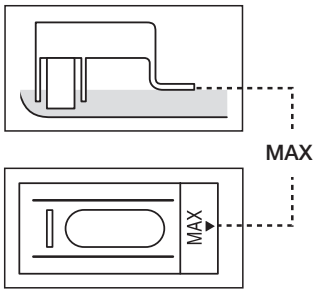

WD8122CVB-02574P_EN.indd 25 2008-06-05 ø¿»ƒ 2:29:25

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

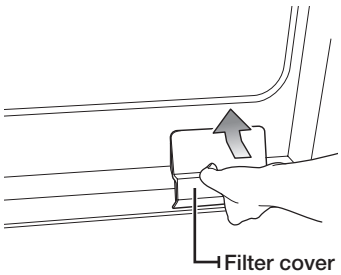

3. Unscrew the emergency drain cap by turning it to the left.

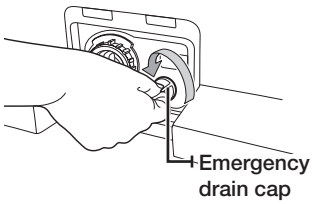

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.
6. Reinsert the drain tube and screw the cap back on.
7. Replace the filter-cover.

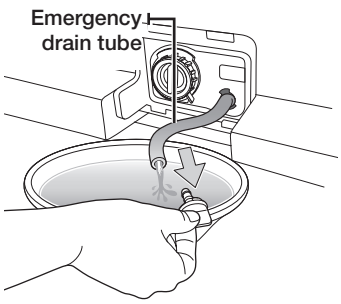

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WD8122CVB-02574P_EN.indd 26 2008-06-05 ø¿»ƒ 2:29:26

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the liquid detergent divider from the detergent drawer.

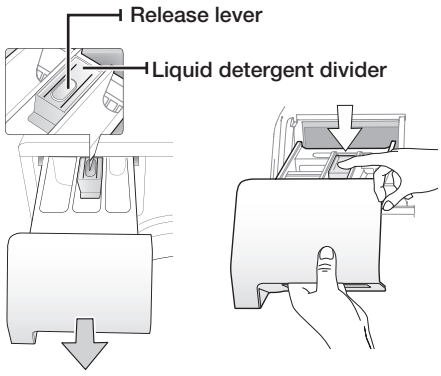

3. Wash all parts under running water.

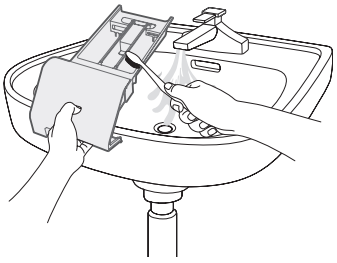

4. Clean the drawer recess with an old toothbrush.
5. Replace the liquid detergent divider by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

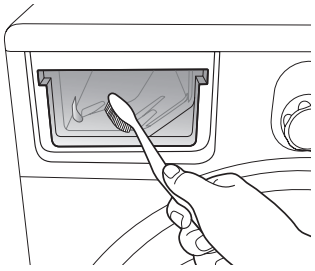

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

1. Open the filter cover by using a key or coin.
2. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
3. Unscrew the debris filter cap.

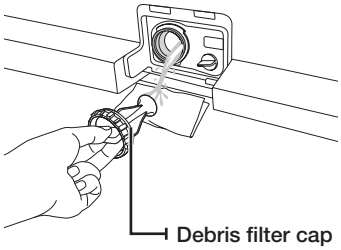

4. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
5. Replace the debris filter cap.
6. Replace the filter cover.

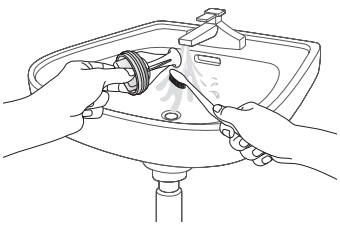

WD8122CVB-02574P_EN.indd 27 2008-06-05 ø¿»ƒ 2:29:27

cleaning and maintaining your washing machine

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the Quick cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WD8122CVB-02574P_EN.indd 28 2008-06-05 ø¿»ƒ 2:29:27

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	**1.** Disconnect the power plug from the power supply. **2.** Open the filter cover using a coin. **3.** Remove the water from the washing machine. **4.** Locate the orange plastic tab and pull it forward to open the door.

If the problem persists, contact your local Samsung Customer Service.

WD8122CVB-02574P_EN.indd 29 2008-06-05 ø¿»ƒ 2:29:27

troubleshooting and information codes

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an "UE" error message will be shown in the display window.
3E	• Call the after-sales service.
PoF	After the power is turned off and on again by the power failure of the moment, an "PoF" error message will blink: • If you press the **Start/Pause** button, the operation restarts from the cycle that was automatically stored due to the power failure. • If you turn off the washing machine, the stored cycle will be removed.

For any codes not listed above, or if the suggested solution doesn't fix the problem, call your Samsung Service Centre or local Samsung dealer.

WD8122CVB-02574P_EN.indd 30 2008-06-05 ø¿»ƒ 2:29:27

cycle chart

CYCLE CHART

(● user option)

Programme	Max load (kg)	DETERGENT AND ADDITIVES			Temperature (MAX) °C		Spin rpm (max)	Delay end	Water (ℓ)	Electricity (kWh)
		Pre-wash	wash	Soft-ener	Default	Max				
Cottons	12	●	yes	●	60	60	1200	●	106	0.65
Boil	6	●	yes	●	95	95	800 (1200)	●	105	3.55
Quick	5	-	yes	●	40	40	800 (1200)	●	70	0.68
Towel	5	●	yes	●	40	95	600 (800)	●	110	0.85
Blanket	1 sheet (Within 3 kg)	●	yes	●	30	40	800	●	90	0.18
Wool	4	-	yes	●	30	40	600	●	80	0.42
Clean Tub	-	-	yes	-	40	40	600	●	56	0.91

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456/EN 60456.
3. Consumption in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.

WD8122CVB-02574P_EN.indd 31 2008-06-05 ø¿»ƒ 2:29:28

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.
The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WD8122CVB-02574P_EN.indd 32 2008-06-05 ø¿»ƒ 2:29:32

SPECIFICATIONS

TYPE		FRONT LOADING WASHER
DIMENSIONS		W 650 mm X D 770 mm X H 940 mm
WATER PRESSURE		50 ~ 780 kPa
WEIGHT		97 kg / 104 kg
WASH AND SPIN CAPACITY		12 kg [DRY LAUNDRY]
DRY CAPACITY		7.0 kg
POWER CONSUMPTION	WASHING	150 W
	WASHING AND HEATING	2200 W
	DRYING	2100 W
WATER VOLUME		106 ℓ
SPIN REVOLUTIONS	MODEL	WD8122CVC, WD8122CVD, WD8122CVB, WD8122CVW
	rpm	1200 rpm

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WD8122CVB-02574P_EN.indd 33 2008-06-05 ø¿»ƒ 2:29:33

memo

memo

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com

Code No. DC68-02574P_EN

WD8122CVD
WD8122CVB
WD8122CVW
WD8122CVC

غسالة الملابس

دليل المستخدم

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً, الرجاء تسجيل
المنتج على موقع

www.samsung.com/global/register

SAMSUNG

WD8122CVB-02574P_AR.indd 1 6/5/2008 6:43:15 PM

ميزات الغسالة الجديدة من samsung

تتميز الغسالة الجديدة بأنها مزودة بإمكانية تغيير الطريقة التي ترغب في أداء الغسيل بها. تتميز غسالة Samsung بوجود كافة الميزات التي تحول المهام غير المرغوبة إلى شيء ممتع، بدءاً من سعتها ذات الحجم الفائق وحتى استهلاكها الاقتصادي للطاقة.

- **حاوية مصممة على شكل معين ــ غسيل على نحو أكثر فاعلية مع حماية القماش**

  توفر أداء أفضل للغسيل عن الغسالات ذات الحاوية العادية، باستخدام مؤثرات لوحة الغسيل التي تحدثها أمواج الحاوية الداخلية.

- **توازن الكرة ــ تمتع بالهدوء! عدم وجود ضوضاء أو اهتزازات**

  عمليات اهتزاز وضوضاء خفيفة من خلال استخدام نظام توازن الكرة والذي يحافظ على التوازن المثالي لحاوية الغسيل.

- **وظائف اقتصادية يمكن تخصيصها ــ الماء والوقت وتوفير الطاقة**

  تعمل هذه الوظيفة على التحقق من وزن الغسيل في سبع خطوات وتقليل استهلاك الماء والوقت والطاقة.

- **غسيل بالهواء ــ تعمل هذه الوظيفة على التعقيم وإزالة الرائحة الكريهة دون استخدام الماء!**

  قم بتنظيف ملابسك المفضلة بطريقة مبسطة باستخدام البخار بعد رجوعك من حفلة ما أو من الخارج (من جراء الطعام أو السجائر). لم تعد هناك حاجة لغسيل الملابس غير الملطخة، حيث يمكنك تنظيفها بطريقة مبسطة باستخدام أربع دورات متوفرة للأقمشة المختلفة.

- **غسيل فضي ــ تعمل هذه الميزة على التعقيم والمؤثرات المضادة للبكتريا باستخدام الماء البارد فقط**

  عملية التجميع الناجحة! تعمل تقنية بأيونات الفضة من Samsung على تجميع أثر التعقيم الناتج عن الغسيل الفضي باستخدام العلوم المتقدمة للحصول على أقصى درجات الغسيل النظيف! يتم تحويل طبقين من الفضة النقية إلى أيونات فضية عن طريق التحليل بالكهرباء. تقوم الجزيئات الفضية بإزالة الرائحة التي تسبب البكتريا التي تحدث أثناء دورة الغسيل "نظافة قصوى" حتى وإن كانت في ماء بارد أو ماء بلا مادة تبييض اللون. لذا تتميز عملية الغسيل في ماء بارد بأنها اقتصادية في استهلاك الطاقة كما أنها أفضل لغسيل الملابس.

- **محرك كهربائي مباشر**

  تقل عمليات الاهتزاز بشكل ملحوظ حيث أن حاوية الغسيل لا تستخدم الأحزمة أو التروس. تضمن هذه الميزة تشغيل الغسالة بشكل أكثر هدوءاً وأكثر تحملاً.

- **التأمين ضد عبث الأطفال**

  تضمن وظيفة "التأمين ضد عبث الأطفال" إبقاء الأطفال بعيداً عن الغسالة.
  تعمل ميزة الأمان هذه على منع الأطفال من اللعب بالغسالة بالإضافة إلى تنبيهك عند تشغيلها.

WD8122CVB-02574P_AR.indd 2 6/5/2008 6:43:17 PM

- **تأجيل الإنهاء**

تأجيل الدورة حتى ١٩ ساعة بإمكانية زيادة ساعة وزيادة إمكانية استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

- **اعتماد غسيل الصوف**

لقد تم اختبار الغسالة وقد تطابقت مع المواصفات التي حددتها شركة Woolmark الخاصة بغسل المنتجات الصوفية في الغسالة. يجب غسل الأقمشة وفقاً للتعليمات الموجودة على البطاقة اللاصقة الموجودة على الملابس كما هو محدد من قبل شركتى Woolmark و Samsung.

- **لوحة العرض الرسومية الرقمية**

تتميز لوحة العرض الرسومية الرقمية (لوحة التحكم) بأنها واضحة وسهلة الاستخدام مما يقلل من احتمالية حدوث مشاكل أو متاعب. وبالإضافة إلى سهولة استخدامها، تتيح لك لوحة العرض الرسومية الرقمية إجراء تعديلات بسرعة ودقة للحصول على نتائج رائعة للغسيل.

- **باب واسع**

تتوفر بالباب الذي يتميز باتساعه الكبير فتحة لإتاحة مشاهدة الغسيل بشكل مناسب! كما أنه يسمح بإضافة الغسيل وإزالته بسهولة، وخصوصا أنواع الغسيل كبيرة الحجم مثل المفروشات والمناشف إلخ.

يحتوى هذا الدليل على معلومات هامة حول عملية التركيب، والاستخدام، وصيانة غسالة Samsung الجديدة. ويمكنك الرجوع إليه للتعرف على شكل لوحة التحكم، والتعليمات التي تتعلق بكيفية استخدام الغسالة، والتلميحات التي تتعلق باستغلال أحدث الميزات والإمكانات المتوفرة بها. يرشدك قسم "استكشاف المشكلات وإصلاحها" الموجود في صفحة ٢٩ إلى ما يجب عليك فعله في حالة حدوث خطأ ما بالغسالة الجديدة.

WD8122CVB-02574P_AR.indd 3 6/5/2008 6:43:17 PM

معلومات السلامة

أثناء قراءة هذا الدليل، سوف تشاهد ملاحظات تحذيرية ⚠ وتنبيهيه ⚠. لا تشير التحذيرات والتنبيهات وإرشادات السلامة الهامة التالية إلى كافة الظروف والمواقف المحتمل التعرض لها. لذا يجب التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها. لا تقع على شركة Samsung أية مسؤولية تجاه الأضرار الناتجة عن سوء الاستخدام.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم هذ إلى ما يلي:

⚠ تحذير	ممارسات خطيرة أو غير آمنة قد تؤدي إلى إصابات بالغة أو الوفاة.
⚠ تنبيه	ممارسات خطيرة أو غير آمنةقد تؤدي إلى إصابات طفيفة للأفراد أو تلف الغسالة.
⚠ تنبيه	لتقليل خطر حدوث حريق أو انفجار أو صعقة كهربائية أو إصابة جسدية عند استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:

	ممنوع.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات كما هي.
	قم بفصل موصل الطاقة من مقبس الحائط.
	تأكد من أن الغسالة مثبته على الأرض لمنع حدوث صعقة كهربائية.
	اتصل بمركز الخدمة للمساعدة.

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللأخرين.
لذا الرجاء اتباعها بعناية.
قم بحفظ هذا الدليل في مكان آمن بعد قراءته للاحتفاظ به كمرجع في المستقبل.

اقرأ كافة التعليمات أولاً قبل استخدام الجهاز.

نظراً لاحتمال حدوث مخاطر مع أي جهاز يعمل بالكهرباء وبه أجزاء يمكن تحريكها. لتشغيل هذا الجهاز بأمان، يجب عليك التعرف على طريقة تشغيله وتوخي الحذر عند استخدامه.

قم بتركيب الغسالة ووضعها في مكان مغلق، بحيث لا تتعرض لعوامل الطقس.

قم بتركيب الغسالة وجعلها مستوية على أرضية تتحمل وزنها.

يجب تثبيت الغسالة على الأرض بشكل صحيح. لا تقم بتوصيلها بأحد المآخذ غير الأرضية.

WD8122CVB-02574P_AR.indd 4 6/5/2008 6:43:18 PM

لتقليل مخاطر حدوث حريق أو انفجار:

تنبيه

- لا تقم بغسيل الملابس التي تم غسلها أو نقعها أو التعامل معها باستخدام الجازولين أو مذيبات التنظيف الجاف، أو المواد الأخرى القابلة للاشتعال أو الانفجار، لأنها تحدث أبخرة يمكن أن تشتعل أو تنفجر. قم بشطف أية ملابس تعرضت لمذيبات تنظيف أو أية سوائل أو مواد صلبة أخرى قابلة للاشتعال يدوياً قبل وضعها في الغسالة. تأكد من التخلص من كافة آثار تلك المواد السائلة والصلبة والأبخرة. تتضمن المواد الخطرة الأسيتون، والمواد الكحولية، والجازولين، والكيروسين، وبعض المنظفات المنزلية السائلة، ومزيلات البقع، والزيوت التربنتينة، والشمع، ومزيلات الشمع.
- لا تضع الجازولين، أو مذيبات التنظيف الجاف، أو أية مواد أخرى قابلة للاشتعال أو الانفجار في الغسالة.
- قد يصدر غاز الهيدروجين في نظام الماء الساخن في ظروف معينة - كما هو الحال بالنسبة لسخان الماء الساخن الخاص بك - الذي لم يُستخدم لمدة أسبوعين أو أكثر. غاز الهيدروجين قابل للانفجار. في حالة عدم استخدام نظام الماء الساخن لمدة أسبوعين أو أكثر، قم بتشغيل كافة صنابير الماء الساخن الموجودة في المنزل، ودع الماء يتدفق لبضعة دقائق قبل استخدام الغسالة. يعمل ذلك على التخلص من غاز الهيدروجين الذي تم تكوينه. لا تقم بالتدخين أو إشعال أي مصدر لهب مفتوح في ذلك الوقت نظراً لأن غاز الهيدروجين قابل للاشتعال.

قم بتهوية القابس على الفور دون لمسه في حالة تسرب الغاز.

قم بفصل سلك الطاقة قبل صيانة الغسالة.

قم بتفريغ جيوب الملابس قبل كل غسله. حيث يمكن أن تتسبب الأشياء الصغيرة، والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية، والشفرات، والدبابيس، وماسكات الورق في تلف الغسالة. لا تقم بغسيل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

لا تفتح باب الغسالة في حالة وجود الماء داخل الغسالة. تأكد من أنه قد تم تصريف الماء قبل فتح الباب.

لا تقم بإصلاح أي جزء من الغسالة أو استبداله أو صيانته بنفسك إلا في حالة تفهمك الكامل لإرشادات الإصلاح الموصى بها بالنسبة للمستخدم وتوفر المهارات اللازمة لتنفيذها. قد تؤدي عملية الإصلاح من قبل شخص غير معتمد إلى إلغاء الضمان.

قم بتوصيل الغسالة بمصادر الماء الرئيسية باستخدام خراطيم جديدة. لا تعيد استخدام الخراطيم القديمة.

تتأثر خراطيم صنبور الماء بمرور الوقت. لذا يجب فحص الخراطيم بشكل دوري لمعرفة ما إذا يوجد انتفاخ أو التواء أو قطع أو تمزق أو تسرب، واستبدالها حسبما تقتضي الحاجة وكل خمس سنوات على الأقل.

قد تشكل مواد التعبئة خطورة على الأطفال؛ احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين...الخ) بعيداً عن متناول الأطفال.

يجب إزالة جميع مسامير التعبئة والشحن قبل تشغيل الجهاز. قد تحدث أضرار خطيرة في حالة عدم إزالتها. راجع الجزء "إزالة مسامير الشحن".

قبل غسيل الملابس للمرة الأولى، يجب تشغيل الغسالة دورة كاملة دون ملابس.
راجع "الغسيل للمرة الأولى".

WD8122CVB-02574P_AR.indd 5 6/5/2008 6:43:18 PM

معلومات الأمان

تم تصميم الجهاز للاستخدام المنزلي فقط.

تأكد من قيام فنيين مؤهلين بتوصيل توصيلات الماء والكهرباء، مع مراعاة تعليمات الشركة المصنعة (راجع "تركيب الغسالة") وقوانين السلامة المحلية.
تنبيه

قم بفصل قابس الجهاز من منفذ التيار الكهربائي قبل تنظيفه أو صيانته.

افصل قابس الجهاز من منفذ التيار الكهربي وأغلق صنبور الماء بعد الاستخدام دائمًا.

تأكد من تفريغ جيوب الملابس التي سيتم غسلها.

يمكن أن تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو البراغي أو الأحجار في إحداث أضرار بالغة بالجهاز.

لا تدع الحيوانات الأليفة والأطفال يلعبون فوق الغسالة أو بداخلها. فقد يلحق ذلك بهم ضرراً أو يؤدي إلى اختناقهم.

يصبح الباب الزجاجي ساخنًا جدًا أثناء دورة الغسيل. لا تقم بلمس الباب الزجاجي أثناء الاستخدام.

لا تحاول إصلاح الجهاز بنفسك. قد تؤدي عمليات الإصلاح من قبل الأفراد غير الفنيين أو غير المؤهلين إلى حدوث إصابات و/أو إحداث المزيد من الخلل بالجهاز.

في حالة تلف قابس الجهاز (سلك التيار الكهربائي)، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.

يجب صيانة هذا الجهاز من قبل مركز الخدمة المعتمد التابع لنا، ويجب تبديل قطع الغيار بقطع غيار أصلية فقط.

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.
تنبيه

هذا الجهاز غير مخصص للاستخدام بواسطة الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة ما لم يخضعوا لإشراف شخص مسئول للتأكد من استخدامهم للجهاز بشكلٍ آمن.

يجب مراقبة الأطفال الصغار لضمان عدم عبثهم بالغسالة.

يجب أن يكون المستخدم ملماً بالتعليمات الخاصة بتشغيل الغسالة وأن يتوخي بالغ الحذر والحيطة عند استخدامها بصفه دائمة حتى يتسنى له استخدامها بشكل آمن.

يجب وضع الجهاز بالقرب من مأخذ التيار الكهربائي، وصنابير توريد الماء وخراطيم تصريف الماء بحيث يسهل الوصول إليها.

يُحظر استخدام الماء المعالجة والتي تحتوي على زيوت أو كريمات أو مستحضرات، والتي تكون في الغالب موجودة في المستحضرات الجلدية أو عيادات التدليك.

- وإلا سيؤدي هذا إلى إتلاف التغليف وهو ما يؤدي بدوره إلى حدوث خلل أو تسرب الماء.

WD8122CVB-02574P_AR.indd 6 6/5/2008 6:43:19 PM

وبالنسبة لأنبوب الغسيل الداخلي فهو مصنوع بحيث يكون مضاداً للصدأ. ولكن في حالة ترسب بعض المعادن الصغيرة مثل دبابيس الشعر في ذلك الأنبوب لفترة زمنية طويلة، فقد يتعرض الأنبوب للصدأ نتيجة لذلك.

- يُحظر أيضاً ترك الماء التي تحتوي على الكلور أو أي مواد كيميائية في الأنبوب لفترة زمنية طويلة.
- يُحظر استخدام الماء التي تحتوي على المعادن بصورة منتظمة أو تركها في الأنبوب لفترة زمنية طويلة. وفي حالة ظهور الصدأ على سطح الأنبوب، يفضل تنظيف سطح الأنبوب باستخدام سائل تنظيف (محايد) واستخدام قطعة قماش ناعمة أو قطعة إسفنج في التنظيف. (يُحظر بأي حال من الأحوال استخدام فرشة معدنية في التنظيف)

بالنسبة إلى الغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد أو أية عوائق أخرى لهذه الفتحات.

استخدم أطقم خراطيم جديدة، حيث يجب عدم إعادة استخدام الخراطيم القديمة.

WD8122CVB-02574P_AR.indd 7 6/5/2008 6:43:19 PM

المحتويات

إعداد الغسالة ٩

٩ **فحص الأجزاء ولوحة التحكم.**
١٠ **استيفاء متطلبات التركيب**
١٠ مصدر الطاقة الكهربائية والتوصيل الأرضي
١٠ توريد الماء
١١ التصريف
١١ سطح الأرضية
١١ درجة الحرارة المحيطة
١١ تركيب القنطرة أو الخزانة
١١ **تركيب الغسالة**

غسيل الملابس ١٧

١٧ **الغسيل للمرة الأولى**
١٧ **إرشادات أساسية**
١٨ **استخدام لوحة التحكم**
٢٠ التأمين ضد عبث الأطفال
٢٠ تأجيل الإنهاء
٢٠ "إيقاف وإضافة"
٢١ الغسيل بالهواء
٢٢ غسيل الملابس باستخدام قرص تحديد الدورة
٢٣ غسيل الملابس يدوياً
٢٤ **تعليمات الغسيل**
٢٥ **معلومات حول مسحوق الغسيل والمواد الإضافية**
٢٥ ما هو مسحوق الغسيل الذي يمكنك استخدامه
٢٥ درج مسحوق الغسيل

تنظيف الغسالة وصيانتها ٢٦

٢٦ **تصريف الماء من الغسالة عند الطوارئ**
٢٦ **تنظيف الأسطح**
٢٧ **تنظيف درج مسحوق الغسيل والجزء المرتد منه**
٢٧ **تنظيف مصفاة المخلفات**
٢٨ **تنظيف المصفاة الشبكية المتصلة بخرطوم الماء**
٢٨ **إصلاح جهاز غسالة متجمد**
٢٨ **تخزين الغسالة**

استكشاف المشاكل وحلها ورموز المعلومات ٢٩

٢٩ **تحقق مما يلي إذا كانت الغسالة...**
٣٠ **رموز المعلومات**

جدول الدورة ٣١

٣١ **جدول الدورة**

الملحق ٣٢

٣٢ **جدول العناية بالأقمشة**
٣٢ **حماية البيئة**
٣٢ **إعلان التوافق**
٣٣ **المواصفات**

WD8122CVB-02574P_AR.indd 8 6/5/2008 6:43:19 PM

إعداد الغسالة

تأكد من إتباع هذه الإرشادات بدقة عند التركيب حتى تعمل الغسالة بشكل صحيح ولتجنب حدوث إصابات عند القيام بالغسيل.

فحص الأجزاء ولوحة التحكم.

أخرج الغسالة بحرص من الصندوق وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن. أو عدم استلامك لكافة الأجزاء. قم بالاتصال بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

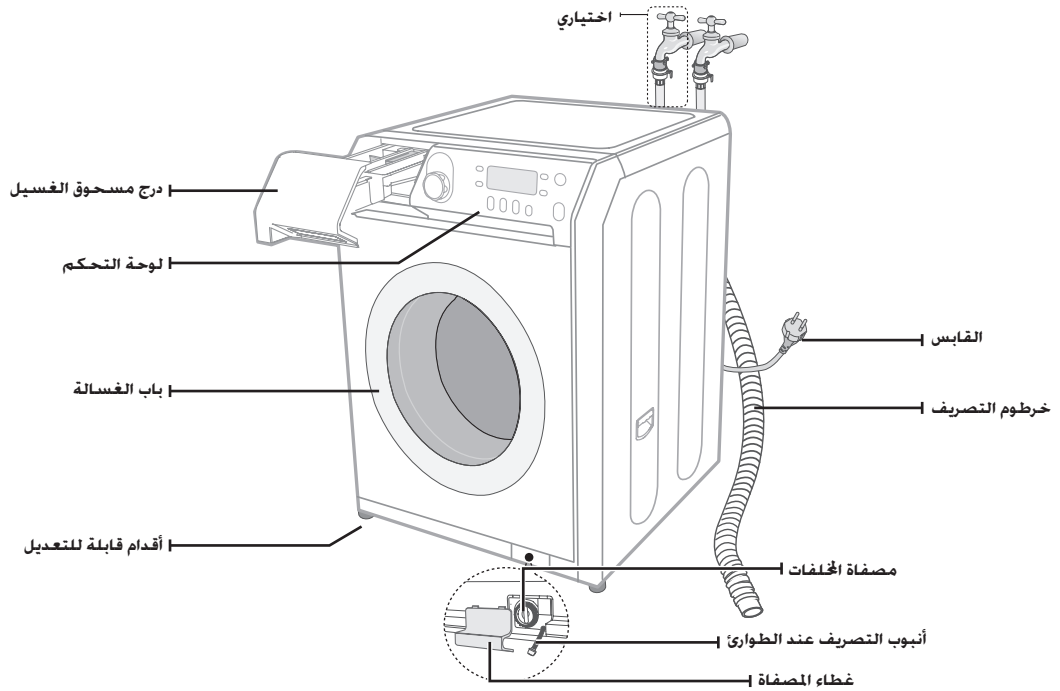

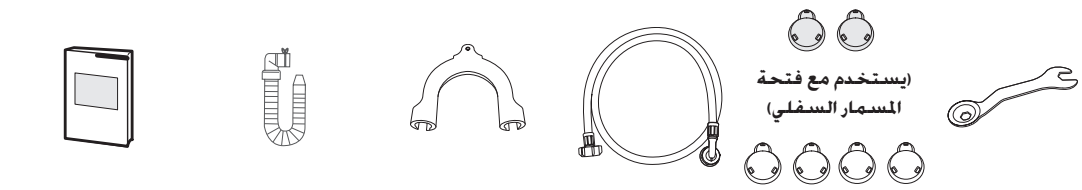

WD8122CVB-02574P_AR.indd 9 6/5/2008 6:43:20 PM

إعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل الأرضي

لتقليل خطر حدوث حريق أو صعقة كهربائية أو إصابة جسدية، يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضي وفقاً لأحدث نسخة من اللائحة القومية أو الوطنية للكهرباء ANSI/FNPA، رقم ٧٠ والقوانين والضوابط المحلية. تقع على عاتق المالك مسؤولية توفير المتطلبات الكهربائية الكافية لهذا الجهاز.

يحظر استخدام كبلات مد.
استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن سلك التيار الكهربائي يوفر:

- قاطع دائرة كهربائية أو صهير بقدره ٢٢٠ فولت ~ ٢٤٠ فولت و ٥٠ هرتز و ١٥ أمبير
- دائرة كهربائية فرعية لتشغيل الغسالة فقط

يجب تثبيت الغسالة على الأرض بشكل صحيح. وفي حالة حدوث خلل أو تعطل في الأداء، سيؤدي التوصيل الأرضي إلى تقليل خطورة حدوث صعقة كهربائية وذلك بتوفير مسار من المقاومة للتيار الكهربائي.
تكون الغسالة مزودة بسلك تيار كهربائي به ثلاثة قوابس شوكية أرضية لاستخدامها في الأرضي المركب المناسب بشكل صحيح

لا تقم بتوصيل السلك الأرضي بخطوط المواسير المصنوعة من البلاستيك، أو خطوط الغاز، أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صعقة كهربائية.
استشر الفني المتخصص أو الموظف المختص بالخدمة إذا لم تكن متأكداً من صحة التوصيل الأرضي للغسالة. يحظر استخدام قابس أخر غير المرفق مع الغسالة. وفي حالة عدم ملاءمته مع مأخذ التيار، استعن بالفني المتخصص لتركيب مأخذ مناسب.

توريد الماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء ٥٠ ~ ٨٠٠ كيلوباسكال. قد يتسبب ضغط الماء الذي يكون أقل من ٥٠ كيلوباسكال في سقوط صمام الماء مما يؤدي إلى عدم إغلاقه بشكل كامل. أو قد تستغرق الغسالة وقت أطول مما تسمح به عناصر التحكم لملئها، مما ينتج عنه إيقاف تشغيل الغسالة. (تم تضمين نظام تحديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)
يجب أن تكون صنابير الماء على بعد ٤ أقدام (١٢٢ سم) من اللوحة الخلفية للغسالة لتسهيل وصول خراطيم صنابير الماء المرفقة إلى الغسالة.

تقوم معظم متاجر توريد المواسير ببيع خراطيم صنابير الماء بمختلف أطوالها التي تصل إلى ١٠ أقدام (٣٠٥ سم).

يمكنك تقليل مخاطر تسرب الماء أو تلوثه عن طريق:

- تيسير وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم استخدام الغسالة.
- تحقق بشكل دوري مما إذا كانت مثبتات الخرطوم تسرب الماء.

تحذير

قم بفحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق مما إذا كان هناك أي تسريبات قبل استخدام الغسالة للمرة الأولى.

WD8122CVB-02574P_AR.indd 10 6/5/2008 6:43:20 PM

التصريف

توصي Samsung باستخدام ماسورة رأسية يصل ارتفاعها إلى ١٨ بوصة (٤٦ سم). يجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اتجاه الماسورة الرأسية. يجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لإدخال القطر الخارجي لخرطوم التصريف. يقوم المصنع بإرفاق خرطوم التصريف.

سطح الأرضية

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. يكون السجاد وأسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية تحرك الغسالة بشكل طفيف أثناء دورة التنشيف.
لا تقم بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء، حيث أن الغسالة دوماً ما تحتفظ ببعض الماء في صمام الماء والمضخة وأجزاء من الخرطوم. يمكن أن يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالأحزمة والمضخة والمكونات الأخرى. يجب عليك دوماً استخدام الغسالة عندما تكون درجة الحرارة المحيطة ٦٠ درجة فهرنهايت (١٦ درجة مئوية).

تركيب القنطرة أو الخزانة

لتشغيل الغاسلة بشكل آمن وسليم، يجب توفير الحد الأدنى من المساحات بالنسبة إلى ما يلي:

الجوانب ـــ ٢٥ مم (١ بوصة) الجانب الخلفي ـــ ٥١ مم (٢ بوصة)

الجانب العلوي ـــ ٢٥ مم (١ بوصة) الجانب الأمامي ـــ ٤٦٥ سم مربع (٧٢ بوصة مربعة)

في حالة تركيب الغسالة والمجفف معاً، يجب أن يكون بالجانب العلوي للقنطرة أو الخزانة فتحة هواء خالية قدرها ٧٢ بوصة مربعة (٤٦٥ سم مربع) على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ١

اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره.

- سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تتوفر به تهوية كافية
- لا يصل إلى مرحلة التجمد (تحت ٣٢ درجة فهرنهايت أو ٠ درجة مئوية)
- تكون بعيدة عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك الطاقة

WD8122CVB-02574P_AR.indd 11 6/5/2008 6:43:20 PM

إعداد الغسالة

الخطوة رقم ٢

إزالة مسامير الشحن

قبل تركيب الغسالة، يجب إزالة مسامير الشحن الخمسة من الجانب الخلفي للجهاز.

١. أرخ جميع المسامير بواسطة مفتاح الربط المرفق مع الجهاز.

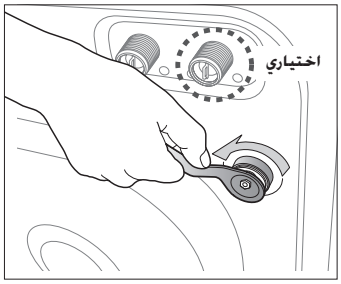

٢. أمسك الصواميل بواسطة مفتاح الربط واسحبها من خلال الجزء العريض للفتحة. كرر ذلك لإزالة كل مسمار.

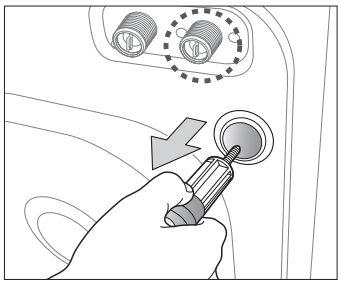

٣. سد جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

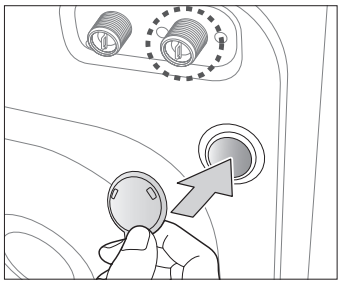

٤. قم بحفظ صواميل الشحن في مكان بعيد آمن لربما تحتاج إلى نقل الغسالة إلى مكان أخر في المستقبل.

⚠ تحذير

قد تشكل مواد التعبئة خطورة على الأطفال؛ لذلك احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين...الخ) بعيداً عن متناول الأطفال.

WD8122CVB-02574P_AR.indd 12 6/5/2008 6:43:21 PM

الخطوة رقم ٣
ضبط استواء أرجل الغسالة

عند تركيب الغسالة، تأكد توصيل سلك الطاقة وخرطوم توريد الماء وخرطوم التصريف بسهولة.

١. ضع الغسالة في المكان المحدد.

٢. اجعل الغسالة مستوية عن طريق لف صمولة التأمين التي يمكن ضبطها، كما هو موضح في الشكل.

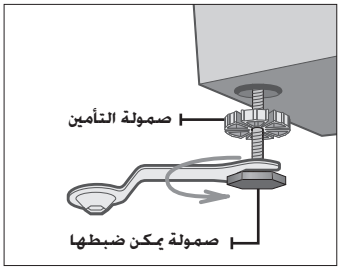

٣. عندما تكون الغسالة مستوية، أربط صمولة التأمين بإحكام باستخدام مفك البراغي (-).

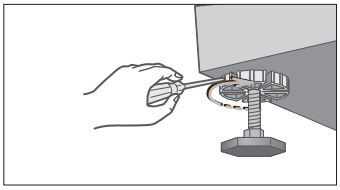

الخطوة رقم ٤
توصيل الماء والخرطوم

توصيل خرطوم توريد الماء

١. استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد ووصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. أحكم ربطه يدويًا.

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة وتوصيل الطرف الآخر للخرطوم بصنبور الماء. لا تشد خرطوم توريد الماء. إذا كان الخرطوم قصيراً للغاية، استبدله بخرطوم أطول عالي الضغط.

٢. صل الطرف الآخر لخرطوم توريد الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

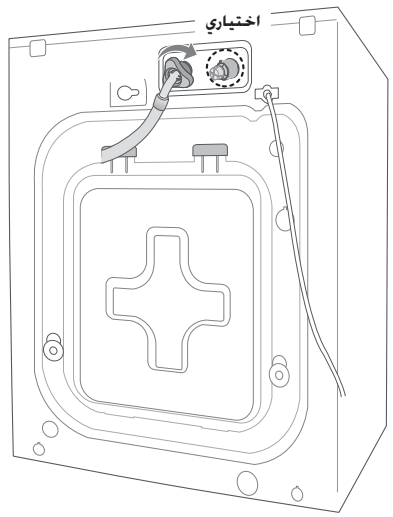

بالنسبة للطرازات المحددة المزودة بمدخل إضافي لتوريد الماء الساخن:

١. استخدم مثبت الذراع الذي على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن ووصله إلى مدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. أحكم ربطه يدويًا.

٢. صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.

٣. استخدم قطعة على شكل حرف Y إذا أردت استخدام الماء البارد فقط.

WD8122CVB-02574P_AR.indd 13 6/5/2008 6:43:21 PM

إعداد الغسالة

توصيل خرطوم توريد الماء (طرازات معينة)

١. إزالة المحول من خرطوم تزويد الماء.

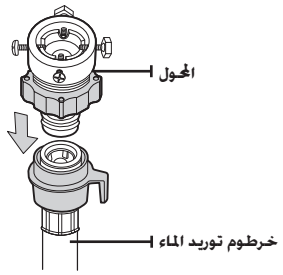

٢. أولاً، باستخدام مفك براغي من نوع "+"، أرخ المسامير الأربعة الموجودة بالمحول. ثم أخرج المحول واجعل الجزء (٢) باتجاه السهم حتى تتواجد مسافة مقدارها ٥ مم بينهما.

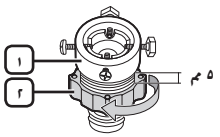

٣. قم بتوصيل المحول بصنبور الماء عن طريق ربط المسامير بإحكام. اجعل الجزء (٢) باتجاه السهم ووصل (١) و (٢).

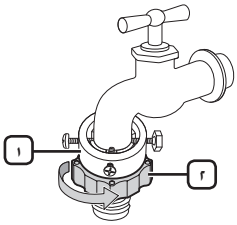

٤. صل خرطوم توريد الماء بالمحول. عند إرخاء الجزء (٣)، يتصل الخرطوم بالمحول تلقائياً محدثاً صوت "إغلاق".

بعد توصيل خرطوم توريد الماء بالمحول، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

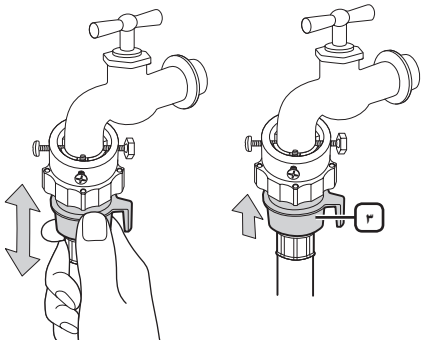

٥. صل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة.

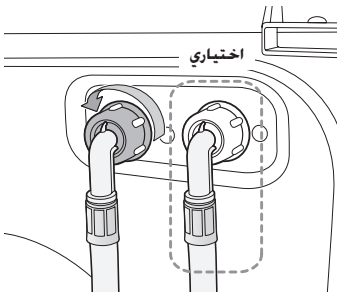

WD8122CVB-02574P_AR.indd 14 6/5/2008 6:43:22 PM

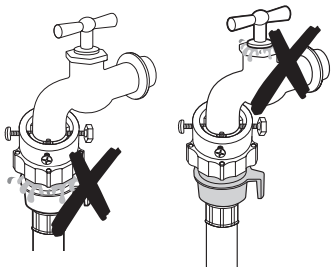

٦. قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو المحول. قم بتكرار الخطوات السابقة. في حالة تسريب الماء.

⚠ تحذير
لا تستخدم الغسالة في حالة تسريب الماء. فقد يتسبب ذلك في حدوث صعقة كهربائية أو إصابة جسدية.

- إذا كان صنبور الماء من نوع برغي. صل خرطوم توريد الماء إلى الصنبور كما هو مبين.

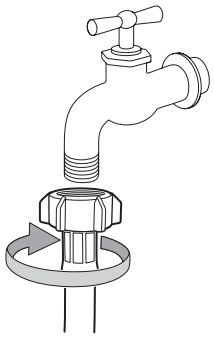

استخدم صنبور من النوع العادي لتوريد الماء. إذا كان الصنبور مربعاً أو كبيراً جداً. أزل الحلقة الفاصلة قبل إدخال الصنبور في المحول.

WD8122CVB-02574P_AR.indd 15 6/5/2008 6:43:23 PM

إعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

١. **فوق حافة حوض الغسيل**: يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم. للإبقاء على انثناء خرطوم التصريف، استخدم سناد الخرطوم البلاستيكي المرفق. ثبت السناد على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

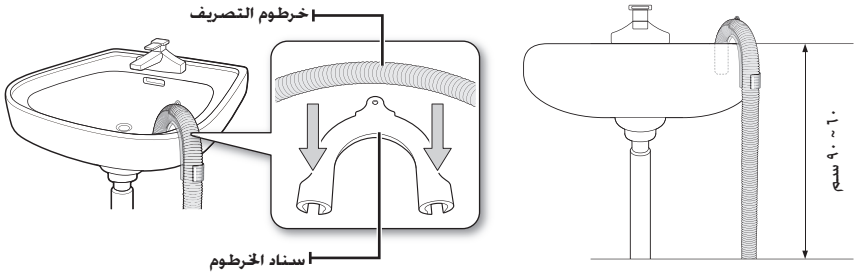

٢. **في فرع أنبوب تصريف الحوض**: يجب أن يكون فرع أنبوب التصريف فوق سباكة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

٣. **في أنبوب تصريف**: توصي Samsung باستخدام أنبوب عمودي على ارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

الخطوة رقم ٥

تشغيل الغسالة

قم بتوصيل سلك التيار الكهربائي بحيث يكون منفذ تيار كهربائي معتمد وبقدره ٢٣٠ فولت ٥٠ هرتز محمي بقاطع صهيرة ١٥ أمبير أو قاطع دائرة كهربائية قابل للمقارنة. (لمزيد من المعلومات حول متطلبات التوصيل الكهربائي والتوصيل الأرضي، راجع صفحة رقم ١٠.)

WD8122CVB-02574P_AR.indd 16 6/5/2008 6:43:24 PM

غسيل الملابس

مع الغسالة الجديدة من Samsung، يقوم الجزء الأكثر صلابة بتحديد الكمية التي يجب غسلها أولاً.

الغسيل للمرة الأولى

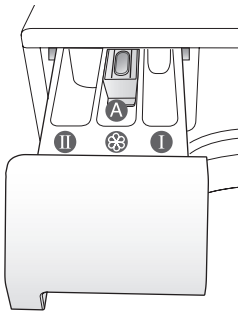

قبل غسيل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة (أي بدون ملابس).

١. اضغط على الزر **تشغيل**.
٢. أضف كمية قليلة من مسحوق الغسيل في الجزء المخصص له Ⅱ في درج مسحوق الغسيل.
٣. قم بتوريد الماء إلى الغسالة.
٤. اضغط على الزر **تشغيل/إيقاف**.

يزيل ذلك أي ماء متبقي في الغسالة نتيجة للتشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

حجيرة Ⅰ : مسحوق للغسيل البدائي أو النشا.
حجيرة Ⅱ : مسحول الغسيل لدورة الغسيل الرئيسية ومواد تنقيه الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.
حجيرة ❀ : المواد الإضافية، مثل مكون أو منعم الأقمشة (لا تتجاوز الحافة السلفية (الحد الأقصى) لـ "A")

إرشادات أساسية

١. قم بوضع الملابس في الغسالة.

تحذير ⚠ لا تتجاوز الحمل المحدد للغسالة. لتحديد سعة الحمل لنوع الغسيل الذي ترغب في غسيله، راجع الجدول الموجود في صفحة رقم ٢٤.

- تأكد من عدم تعلق الغسيل بالباب، فقد يؤدي ذلك إلى تسرب الماء.
- قد يتبقي مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. قم بإزالة أي مسحوق متبقي، لأن ذلك قد يسبب تسرب الماء.
- لا تقم بغسل العناصر العازلة للماء.

٢. أغلق الباب حتى يثبت.
٣. قم بتشغيل الغسالة.
٤. قم بإضافة المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الغسيل التي تم إضافتها.
سيضيء مؤشر الغسيل وسيظهر وقت الدورة المحدد على الشاشة.
٦. اضغط على الزر **تشغيل/إيقاف**

WD8122CVB-02574P_AR.indd 17 6/5/2008 6:43:24 PM

غسيل الملابس

استخدام لوحة التحكم

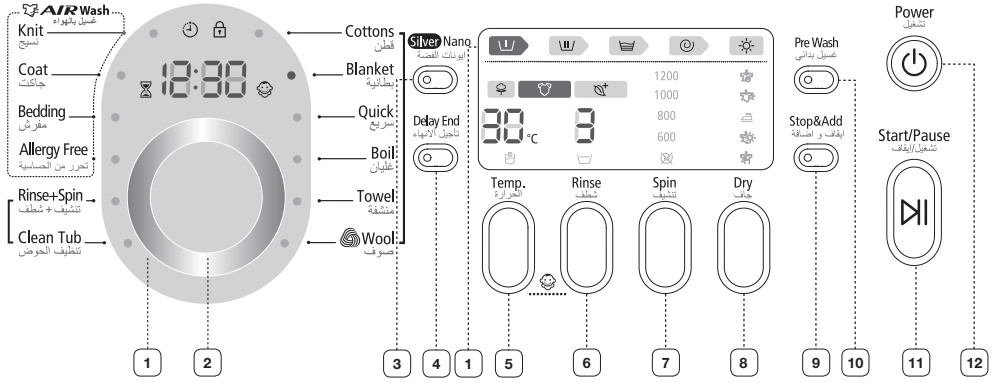

١ **لوحة العرض الرسومية الرقمية**	تعرض الوقت المتبقي لدورة الغسيل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.
٢ **قرص تحديد الدورة**	اختيار نوع التدوير وسرعة التنشيف للدورة. لمزيد من المعلومات، راجع "غسيل الملابس باستخدام قرص اختيار الدورة". **قطن** - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان، الخ **بطانية** - المفارش القطنية وأغطية السرير وملاءات السرير واغطية اللحاف وأغطية الوسائد، الخ. **سريع** - تستخدم هذه الدورة للكميات الصغيرة من الغسيل، أو الغسيل النظيف نسبياً، أو الغسيل المستخدم بشكل متكرر في فترة زمنية قصيرة. **غليان** - تستخدم هذه الدورة لغسيل العناصر اليومية مثل الملابس الداخلية. فهي تعمل على تنظيف الملابس شديدة الاتساخ.وتقوم بعملية التعقيم أيضاً. **منشفة** - تعد هذه الدورة ملائمة لغسيل المناشف بشكل فعال. **صوف** - تستخدم هذه الدورة لغسيل الملابس الصوفية التي يسمح بوضعها في الغسالة فقط. تم اعتماد دورة غسيل الملابس الصوفية في هذه الغسالة من قبل Woolmark لغسيل منتجات Woolmark التي يمكن وضعها في الغسالة شريطة أن يتم غسيل المنتجات وفقاً للتعليمات الموجودة على الملصق الموجود على الملابس والتعليمات الصادرة من الشركة المصنعة لهذه الغسالة M0509 (رقم الشهادة الصادرة عن شركة IWS NOM INEE المحدودة). **غسيل بالهواء** - تعد هذه الدورة ملائمة لإزالة الروائح الكريهة. يؤدي لف قرص تحديد الدورة إلى التبديل بين أوضاع التشغيل التالية نسيج ← جاكت ← مفرش ← خرر من الحساسية **تنشيف+شطف** - تعد هذه الدورة ملائمة للغسيل الذي يحتاج إلى الشطف فقط لإضافة منعم الأقمشة الذي تمت إضافته أثناء الشطف. **تنظيف الحوض** - تستخدم هذه الوظيفة للحفاظ على نظافة حوض الغسيل وتعقيمه.
٣ **زر تحديد أيونات الفضة**	يتم توفير ماء ايونات الفضة أثناء دورة الغسيل وكذلك أثناء دورة الشطف الأخيرة مما يعمل على إزالة البكتريا وتوفير الحماية ضد نمو البكتريا لمدة تصل إلى شهر واحد.
٤ **زر تحديد تأجيل الإنهاء**	اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات تأجيل الإنهاء المتوفرة (حتى ١٩ ساعة بحد أقصى بإمكانية زيادة ساعة). تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.
٥ **زر تحديد الحرارة**	اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات درجة حرارة الماء المتوفرة: (ماء بارد، ٣٠°م، ٤٠°م، ٦٠°م، ٧٥°م، ٩٥°م).
٦ **زر تحديد شطف**	اضغط على هذا الزر لإضافة دورات شطف إضافية. الحد الأقصى لعدد دورات الشطف هو خمسة.

WD8122CVB-02574P_AR.indd 18 6/5/2008 6:43:25 PM

٧ زر تحديد تنشيف	اضغط على هذا الزر بشكل متكرر للاختيار من بين سرعات دورة التنشيف المتوفرة. "**عدم تنشيف**" - يبقى الغسيل في الحاوية دون تشغيل دورة التنشيف بعد تصريف الماء الأخير.
٨ زر تحديد جاف	يؤدي الضغط على هذا الزر إلى التبديل بين الخيارات التالية. **عادي** ← **إضافي** ← **كي** ← **خفيف** ← **الوقت** (٣٠ دقيقة ← ١:٠٠ دقيقة ← ١:٣٠ دقيقة ← ٢:٠٠ دقيقة ← ٢:٣٠ دقيقة) "**عادي**" - حدد هذا الخيار لتجفيف الغسيل تلقائيا عن طريق التعرف على كمية الغسيل ووزنه. حدد هذا الخيار لتجفيف الملابس القطنية مثل السراويل القطنية، والقمصان والملابس الداخلية القطنية. "**إضافي**" - حدد هذا الخيار لتجفيف الملابس القطنية تماماً. (الملابس السميكة مثل الجينز والمناشف والملابس الرياضية، الخ) "**كي**" - يعمل هذا الخيار على إنهاء دورة "جاف" في حالة رطبة بقدرٍ يتلاءم مع الكي. "**خفيف**" - يعمل هذا الخيار على تجفيف الملابس التي قد تتعرض للتشوه في درجات الحرارة العالية وفي درجات الحرارة المنخفضة. (الأقمشة المخلوطة والألياف الصناعية مثل البوليستر والنيلون) "**الوقت**" - يعمل هذا الخيار على تجفيف الغسيل في الفترة الزمنية المحددة. • يجب تجنب غسل الملابس التي قد لا يمكن تجفيفها حيث أنها قد تتعرض للتشوه حتى في درجات الحرارة المنخفضة. • تتعرف خيارات التجفيف "عادي"، و"إضافي"، و" كي"، و"خفيف" على وزن الغسيل حتى يتم عرض وقت دقيق لعملية التجفيف وإجرائها بشكل كامل. • قد تختلف ظروف التجفيف باختلاف نوع الغسيل وحجمه.
٩ زر تحديد إيقافوإضافة	حدد هذا الخيار لإضافة الغسيل أثناء العملية (راجع "إيقاف وإضافة"صفحة رقم ٢٠).
١٠ زر تحديد غسيل بدائي	اضغط على هذا الزر لتحديد "غسيل بدائي". تعمل وظيفة "غسيل بدائي" على إجراء غسيل أولي يتم القيام به لمدة ١٠ دقائق قبل الغسيل الرئيسي. تعتبر وظيفة "الغسيل البدائي" فعالة للاستخدام مع الملابس خفيفة الاتساخ. يمكن استخدام وظيفة "غسيل بدائي" مع الدورات التالية فقط: قطن وبطانية وغليان ومنشفة.
١١ زر تحديد تشغيل/إيقاف	اضغط على هذا الزر لإيقاف الدورة مؤقتاً وإعادة تشغيلها.
١٢ الزر تشغيل	اضغط على هذا الزر مرة لتشغيل الغسالة، واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق أثناء تشغيلها، يتم إيقاف تشغيلها تلقائيًا.

WD8122CVB-02574P_AR.indd 19 6/5/2008 6:43:26 PM

غسيل الملابس

التأمين ضد عبث الأطفال

تمكّنك وظيفة التأمين ضد عبث الأطفال من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسيل التي قمت باختيارها.

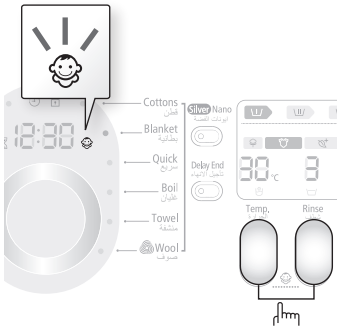

٣ ثوان

التشغيل/عدم التشغيل

إذا كنت ترغب في تشغيل وظيفة "تأمين ضد الأطفال" أو عدم تشغيلها، اضغط على الزرين **حرارة** و **شطف** في وقت واحد لمدة ٣ ثوان. "ستضيء علامة **"التأمين ضد عبث الأطفال"** عن تشغيل هذه الميزة.

يعمل الزر **تشغيل** فقط عند تشغيل وظيفة "التأمين ضد عبث الأطفال". يستمر تشغيل وظيفة "التأمين ضد عبث الأطفال" حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

تأجيل الإنهاء

يمكنك ضبط الغسالة لإنهاء عملية الغسيل تلقائياً في وقت لاحق، باختيار تأجيل وقت الإنهاء حتى ١٩ ساعة بحد أقصى . (بواقع زيادة ساعة واحدة. تشير الساعة المعروضة إلى الوقت الذي سيتم الانتهاء فيه من الغسيل.

١. يمكنك ضبط الغسالة تلقائياً أو يدوياً حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر **تأجيل الإنهاء** بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على الزر **تشغيل/إيقاف**. سيضيء مؤشر. **تأجيل الإنهاء**، وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.
٤. لإلغاء وظيفة تأجيل الإنهاء، اضغط على الزر **تشغيل** ثم قم بتشغيل الغسالة من جديد.

"إيقاف وإضافة"

لا يمكنك إضافة غسيل أثناء تشغيل الغسالة، وعندما يكون الباب مغلقاً، وعندما يكون مصباح "إيقاف وإضافة" مطفأً. يمكنك فقط إضافة غسيل عندما يكون مصباح "إيقاف وإضافة" مضاءً.

١. اضغط على الزر **إيقاف وإضافة** يتم إيقاف تشغيل الغسالة مؤقتًا تلقائياً.
٢. انتظر حوالي ٣٠ ثانية وقم بفحص حالة مصباح "إيقاف وإضافة".
   - الوميض: يتم تصريف الماء الموجود في الغسالة أسفل حتى مستوى الأمان لكي يتم وضع كمية إضافية من الغسيل.
   - إيقاف التشغيل: يمكن إضافة الغسيل.
٣. إضافة الغسيل.
٤. اضغط على الزر **تشغيل/إيقاف**.

- تجنب إضافة غسيل عند امتلاء الغسالة بالرغاوي أو الماء. وإلا ستتسرب الرغاوي أو الماء خارج الباب. تحقق من ذلك قبل فتح الباب.
- ونوصي باختيار وظيفة "إيقاف وإضافة" قبل تشغيل أي من الدورات لمدة خمس دقائق.
- إذا كانت درجة الحرارة الداخلية أعلى من ٥٥°مئوية أثناء دورة الغسيل أو ٧٠°مئوية أثناء دورة التجفيف، فإنه لا يمكن اختيار وظيفة "إيقاف وإضافة".
- لا تقم بفتح الباب بالقوة حيث أن ذلك قد يلحق تلف أو ضرر بالغسالة.

تحذير

WD8122CVB-02574P_AR.indd 20 6/5/2008 6:43:27 PM

الغسيل بالهواء

تتيح وظيفة "الغسيل بالهواء" غسل الملابس دون استخدام ماء بفضل نظام التهوية القوي. تتضمن الملابس التي يمكن تنظيفها المعاطف الصوفية والملابس القطنية و البذل والجواكت والسترات. (قطعتان أو أقل (أقل من ١ كجم))

١. افتح الباب. ضع الغسيل في الغسالة ثم أغلق الباب.
٢. اضغط على الزر **تشغيل**.
٣. اختر **الغسيل بالهواء** عن طريق لف **قرص اختيار الدورة**.

- قم بلف **قرص اختيار الدورة** للتبديل بين البرامج التالية:
"نسيج"، و"جاكت"، و"مفرش"، و"تحرر من الحساسية"، ...

الوضع	مدة الدورة
نسيج	٢٠ دقيقة.
جاكت	٢٦ دقيقة.
مفرش	٤٠ دقيقة.
تحرر من الحساسية	٧,٠ دقيقة

- **تحرر من الحساسية**: اختر هذا البرنامج لتعقيم الغسيل. ضد الحشرات على سبيل المثال. ونظراً لأن درجة الحرارة ترتفع فوق ٩٠ درجة مئوية. فإن الملابس التي تكون عرضة للحرارة قد تشوه أو تتلف
- **مفرش**: يتضمن هذا البرنامج المفارش القطنية. ومع ذلك. فإن غسيل النايلون قد يشوه أو يلحق به ضرر.
- قد تشعر بالحرارة عن لمس الغسيل بعد الانتهاء من الدورة **الغسيل بالهواء** (٤٠ ~ ٤٨ درجة مئوية في المتوسط)
- عند اختيار أحد هذه الخيارات. لا يمكن اختيار زر أخر ويمكنك اختيار أقصى وقت لتأجيل الإنهاء وهو ١٩ ساعة فقط.

٤. أغلق الباب واضغط على الزر **تشغيل/إيقاف**.

- لا يمكن اختيار **الغسيل بالهواء** عند وجود ماء في الحوض. قم بتصريف الماء واختر **غسيل بالهواء**.
- اضغط على الزر **تشغيل/إيقاف** أو **تشغيل** لإخراج الغسيل.
- يمكن استخدام عطر أو أوراق مجففة مع برنامج "الغسيل بالهواء" لإضافة رائحة إلى الغسيل الذي تم تنظيفه (ورقة واحدة لكل قطعة غسيل أو قطعتان).

تجنب إجراء الغسيل بالهواء مع الملابس التالية:

- الملابس الحساسة المصنوعة من الجلد أو المنك أو الفرو أو الحرير. الخ
- الملابس الداخلية ذات الأطرف المعقودة ووسائد الدمى التي تحتوي على "غراء" والسترات التي يمكن أن تفقد زينتها.
- الملابس التي تحتوي أطرافها على أزرار لتجنب كسرها.
- الملابس التي تحتوي على نشا لتجنب تشوهها.

تجنب استخدام الملابس التالية مع برنامج **تحرر من الحساسية**:

- المفروشات الثقيلة مثل الوسائد الخشبية (المزودة بمكان لإراحة الرقبة)
  - الوسائد أو البطاطين المملوءة بالبلاستيك أو القش بدلاً من القطن
  - البطاطين الكهربائية
- البطاطين المصنوعة من الفرو
- البطاطين كبيرة الحجم

WD8122CVB-02574P_AR.indd 21 6/5/2008 6:43:28 PM

غسيل الملابس

غسيل الملابس باستخدام قرص تحديد الدورة

تسهل الغسالة الجديدة من عملية غسل الملابس. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار برنامج غسيل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسيل وسرعات الغسيل المناسبة.

١. افتح صنبور الماء.
٢. اضغط على الزر **تشغيل**.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعم القماش ومسحوق الغسيل البدائي (إذا لزم الأمر) في الحجيرات الخاصة به.

تتاح وظيفة "الغسيل البدائي" عند تحديد الدورات " قطن"، و"غليان"، و"منشفة"، و"بطانية". ويعد الغسيل البدائي ضرورياً فقط في حالة الاتساخ الشديد للملابس.

٧. استخدم **قرص تحديد الدورة** لتحديد الدورة المناسبة وفقاً لنوع المادة:
"قطن"، و"بطانية"، و"سريع"، و"غليان"، و"منشفة"، و"صوف"، "تنشيف+شطف"، و"تنظيف الحوض". ستضيء المؤشرات الخاصة بذلك على لوحة التحكم.
٨. في هذا الوقت، يمكنك التحكم في درجة حرارة الغسيل وحجم الشطف وسرعة التنشيف ووقت التأجيل بالضغط على زر الخيار المناسب.
٩. اضغط على الزر **تشغيل/إيقاف** وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

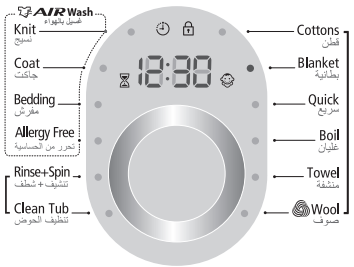

خيار إيقاف

من الممكن إضافة/إزالة قطع غسيل في غضون ٥ دقائق من بدء الغسيل.

١. اضغط على الزر **تشغيل/إيقاف** لإلغاء قفل الباب.

لا يمكن فتح الباب عندما تكون درجة حرارة الماء عالية جداً أو مستوى الماء عالي جداً.

٢. اضغط على الزر **تشغيل/إيقاف** لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد انتهاء دورة الغسيل بالكامل، سيتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

WD8122CVB-02574P_AR.indd 22 6/5/2008 6:43:28 PM

غسيل الملابس يدوياً

يمكنك غسل الملابس يدوياً دون استخدام **قرص تحديد الدورة**.

١. قم بتشغيل مصدر توريد الماء.
٢. اضغط على الزر **تشغيل** الموجود في الغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل. وإذا لزم الأمر، أضف منعم الأقمشة أو مسحوق الغسيل البدائي في الحجيرات المناسبة.
٧. اضغط على الزر **حرارة**. لتحديد درجة الحرارة.
(ماء بارد، ٣٠° م، ٤٠° م، ٦٠° م، ٧٥° م، ٩٥° م)
٨. اضغط على الزر **شطف** لتحديد العدد المطلوب لدورات الشطف.
الحد الأقصى لعدد دورات الشطف هو خمسة.
يتم زيادة مدة الغسيل وفقاً لعدد الدورات.
٩. اضغط على الزر **تنشيف** لتحديد سرعة التنشيف.
تسمح لك وظيفة إيقاف التنشيف بإخراج الملابس التي لا تزال مبتلة من الغسالة. (⎍ : إيقاف الشطف، ⊗ : بدون تنشيف)
١٠. اضغط على الزر **تأجيل الإنهاء** بشكل متكرر للتبديل بين خيارات "تأجيل الإنهاء" المتوفرة (حتى ١٩ ساعة بإمكانية زيادة ساعة)
تشير الساعة المعروضة إلى الوقت الذي سيتم الانتهاء فيه من الغسيل.
١١. اضغط على الزر **تشغيل/إيقاف** وعندها يبدأ تشغيل الدورة.

WD8122CVB-02574P_AR.indd 23 6/5/2008 6:43:28 PM

غسيل الملابس

تعليمات الغسيل

اتبع هذه التعليمات البسيطة للحصول على غسيل أكثر نظافة وأكثر فاعلية.

قم بفحص بطاقة العناية الموجودة على الملابس دوماً قبل الغسيل.

افرز الملابس واغسلها وفقاً للمعايير التالية:

- بطاقة العناية: افرز الملابس إلى أقطان وألياف مخلوطة وأقمشة صناعية وملابس حريرية وأصواف ورايون.
- اللون: قسم الملابس إلى ملابس بيضاء وملابس ملونة. اغسل الملابس الجديدة الملونة كل على حدة.
- الحجم: يعمل وضع الملابس بمختلف أحجامها في مرة واحدة على تحسين عملية الغسيل.
- رقة الملمس: اغسل الملابس الرقيقة كل على حدة، باستخدام الدورة "صوف" من أجل الحصول على ملابس صوفية وستائر حريرية نقية وتبدو جديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

تفريغ الجيوب

قم بتفريغ كافة جيوب الملابس قبل كل عملية غسيل. حيث يمكن أن تتسبب الأشياء الصغيرة، والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية، والشفرات، والدبابيس، وماسكات الورق في تلف الغسالة. لا تقم بغسيل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الحوض. اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل غسلها. إذا تركت سوست السراويل والجواكت مفتوحة أثناء الغسيل، فإن هذا قد يتسبب في تلف سلة التنشيف. يجب غلق السوست وتثبيتها بخيط قبل الغسيل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسيل.

الغسيل البدائي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة، أفضل نتائج الغسيل، ومن ثم فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم الغسيل البدائي مع مسحوق الغسيل الذي يحتوي على البروتين.

تحديد سعة حمل الملابس

لا تتجاوز حمل الغسيل المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة الحمل لنوع الغسيل الذي تقوم بغسله.

نوع القماش	سعة الحمل
الطراز	WD8122CVC/ WD8122CVD/ WD8122CVB/ WD8122CVW
قطن	١٢,٠ كجم
غليان	٦,٠كجم
منشفة / سريع	٥,٠ كجم
بطانية	طبقة واحدة [بوزن ٣ كجم]
صوف	٤,٠ كجم
جاف	٦,٠ كجم

عندما يكون الغسيل غير متوازن تظهر رسالة ("UE" على الشاشة). وحينها أعد توزيع حمل الغسيل

WD8122CVB-02574P_AR.indd 24 6/5/2008 6:43:29 PM

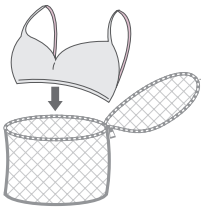

تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسيل (التي يتم شراؤها بشكل منفصل).

- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر مما قد يؤدي إلى تلف الغسيل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسيل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب الجوارب والقفازات والمنسوجات والمناديل. لذا قم بوضعهم داخل شبكة غسيل جيدة.

معلومات حول مسحوق الغسيل والمواد الإضافية

ما هو مسحوق الغسيل الذي يمكنك استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الملابس الرقيقة أو الصوف)، والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دوماً مسحوق الغسيل ذي "الرغوة القليلة" والذي ُصمم خصيصاً للغسالات الأوتوماتيكية. اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. إذا لم تكن تعرف ما إذا كان الماء نقيًا أم لا في منطقتك، اتصل بالهيئة المسؤولة عن الماء.

لا تستخدم منظف صلب أو خشن لأنه قد يتبقي في دورة الشطف لأن ذلك قد يتسبب في أداء الغسالة لدورة التنشيف بشكل غير صحيح،أو يتسبب في إعاقة تدفق الماء.

درج مسحوق الغسيل

تحتوى الغسالة على حجيرات منفصلة لتوزيع المسحوق ومنعم الأقمشة. قم بإضافة كافة المواد الإضافية الخاصة بالغسيل إلى الحجيرة المناسبة قبل بدء تشغيل الغسالة.

"لا تقم" بفتح درج المسحوق أثناء تشغيل الغسالة.

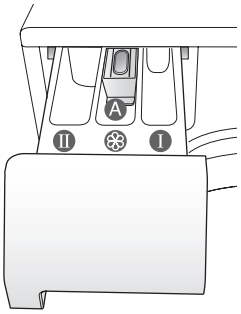

١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيمن من لوحة التحكم.
٢. قم بإضافة كمية من مسحوق الغسيل الموصى به مباشرة في حجيرة المسحوق Ⅱ قبل تشغيل الغسالة.
٣. قم بإضافة الكمية الموصى بها من منعم الأقمشة في الحجيرة الخاصة به ❀ إذا لزم الأمر.
٤. عند استخدام خيار "غسيل بدائي"، قم بإضافة الكمية الموصى بها من مسحوق الغسيل في حجيرة "الغسيل البدائي" Ⅰ.

"لا تستخدم" أنواع المساحيق التالية عند غسيل الملابس كبيرة الحجم.

- مساحيق غسيل التي تكون على شكل ألواح أو أقراص
- مساحيق التي تكون على شكل كرة أو شبكة

يجب إذابة منعم الأقمشة المركز أو السميك بقليل من الماء قبل صبه في درج التوزيع (لمنع إعاقة تدفق الماء.)

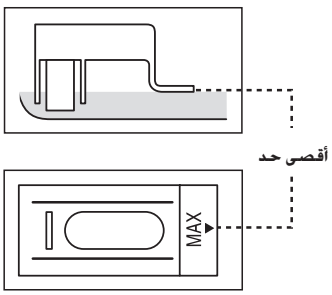

WD8122CVB-02574P_AR.indd 25 6/5/2008 6:43:29 PM

تنظيف الغسالة وصيانتها

يعمل حفظ الغسالة نظيفة على تحسين أدائها، وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.

تصريف الماء من الغسالة عند الطوارئ

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

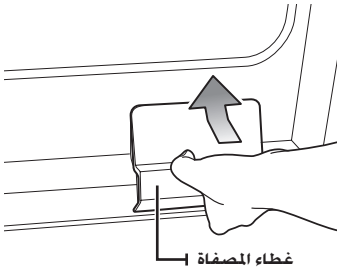

٣. فك غطاء التصريف عند الطوارئ عن طريق لفه لليسار.

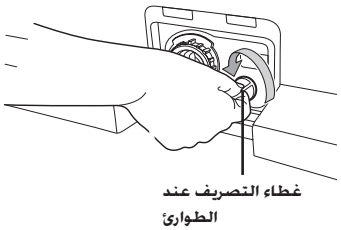

٤. أمسك الغطاء من نهاية أنبوب التصريف عند الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.
٥. اسمح بتصريف الماء بأكمله ليتدفق في وعاء.
٦. أعد إدخال أنبوب التصريف وثبت الغطاء مرة أخرى.
٧. أعد غطاء المصفاة إلى مكانه.

تنظيف الأسطح

١. امسح الأسطح الخارجية لجهاز الغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتنشيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.

WD8122CVB-02574P_AR.indd 26 6/5/2008 6:43:30 PM

تنظيف درج مسحوق الغسيل والجزء المرتد منه

١. اضغط ذراع الإرخاء الموجودة في داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الفاصل الخاص بسائل مسحوق الغسيل من درج مسحوق الغسيل.

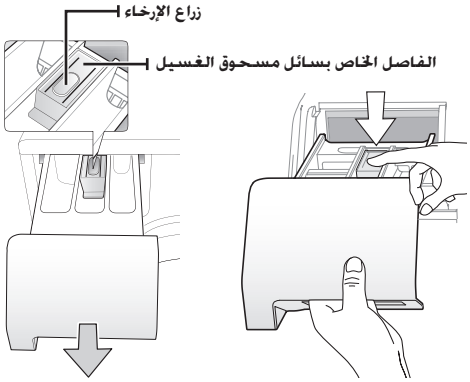

٣. اغسل كافة الأجزاء بالماء الجاري.

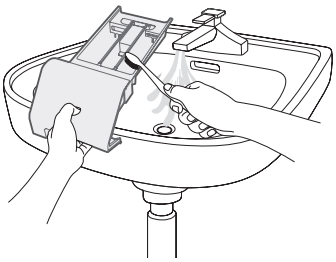

٤. نظف الجزء المرتد للدرج باستخدام فرشاة أسنان قديمة.
٥. ضع الفاصل الخاص بسائل مسحوق الغسيل في مكانه عن طريق دفعه بقوة في الدرج.
٦. أعد الدرج إلى مكانه.
٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحاوية لإزالة أي مسحوق متبقي.

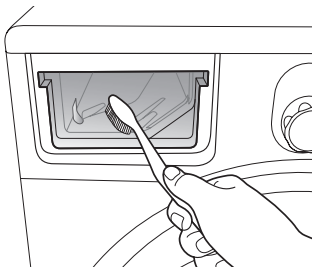

تنظيف مصفاة المخلفات

توصي Samsung بتنظيف مصفاة المخلفات ٥ أو ٦ مرات في العام. أو عند عرض رسالة الخطأ "5E" (راجع "تصريف الغسالة عند الطوارئ" في الصفحة السابقة.)

١. افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
٢. أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
٣. أرخ غطاء مصفاة المخلفات.

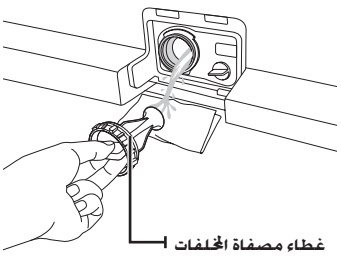

٤. أغسل أية أوساخ أو مواد أخرى عالقة في مصفاة المخلفات. تأكد أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.
٥. ضع غطاء مصفاة المخلفات في مكانه.
٦. ضع غطاء المصفاة في مكانه

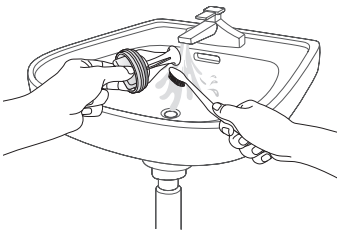

WD8122CVB-02574P_AR.indd 27 6/5/2008 6:43:31 PM

تنظيف الغسالة وصيانتها

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل، أو عند ظهور رسالة خطأ "4E":

١. قم بإيقاف تشغيل مصدر توريد الماء إلى الغسالة.
٢. افصل الخرطوم عن الجانب الخلفي من الغسالة. قم بتغطية الخرطوم بقطعة من القماش، لمنع تدفق الماء بسبب الضغط العالي في الخرطوم.
٣. باستخدام زوج من الزرادية، اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف واشطفها بالماء حتى تصبح نظيفة. نظف كذلك الجزأين الداخلي والخارجي للوصلة الملفوفة.
٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم في الغسالة مرة أخرى.
٦. تأكد أن الوصلات محكمة ضد الماء وقم بتشغيل الصنبور.

إصلاح جهاز غسالة متجمد

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. صب الماء الدافئ على صنبور الماء لإرخاء خرطوم توريد الماء.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يجري كما ينبغي.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة، فمن المستحسن تصريف الماء منها وفصلها. يمكن أن تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

١. اختر الدورة "سريع" ثم قم بإضافة مادة تبييض في الحجيرة الخاصة بمادة التبييض. قم بتشغيل الغسالة من خلال الدورة دون وجود حمل بها.
٢. قم بإيقاف صنابير الماء وافصل خراطيم صنابير الماء.
٣. قم بفصل الغسالة من منفذ التيار الكهربائي، واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.

في حالة قيامك بتخزين الغسالة في درجات حرارة تحت التجمد، اجعل هناك فرصة لامتصاص الماء المتبقي في الغسالة مع الوقت قبل استخدامها مرة أخرى.

WD8122CVB-02574P_AR.indd 28 6/5/2008 6:43:31 PM

استكشاف المشاكل وحلها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
لا تعمل	• تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد من إغلاق الباب بإحكام. • تأكد من فتح صنبور (صنابير) الماء. • تأكد من الضغط على الزر "تشغيل/إيقاف".
عدم وجود ماء أو عدم وجود ماء كافي	• افتح الصنبور تماماً. • تأكد من أن خرطوم توريد الماء غير متجمد. • فك ثنيات الخراطيم الخاصة بمداخل. • نظف المصفاة الموجودة على الخرطوم الخاص بمدخل الماء.
يبقى مسحوق الغسيل في الدرج بعد اكتمال دورة الغسيل	• تأكد من تشغيل الغسالة بضغط ماء كاف. • تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتاً مرتفعاً	• تأكد من تركيب الغسالة على أرض مستوية. إذا كانت الأرض غير مستوية، اضبط قدم الغسالة حتى تستوي على الأرضية. • تأكد من إزالة مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توازن حمل الملابس الموجودة في الغسالة
لا يتم التصريف من الغسالة و/أو لا تقوم بعملية التنشيف	• فك الثنيات الموجودة في خرطوم التصريف. قلل من استخدام الخراطيم الملتوية. • تأكد أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه.	١. افصل القابس من منفذ التيار الكهربائي. ٢. افتح غطاء المصفاة باستخدام قطعة معدنية. ٣. قم بإزالة الماء من جهاز الغسالة. ٤. حدد مكان العلامة البلاستيكية البرتقالية اللون واسحب لفتح الباب.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

WD8122CVB-02574P_AR.indd 29 6/5/2008 6:43:31 PM

استكشاف المشاكل وحلها ورموز المعلومات

رموز المعلومات

عندما تتعرض الغسالة للعطل، قد يظهر رمز معلومات على الشاشة. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول وتجربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	• أغلق الباب.
4E	• تأكد من أن صنبور توريد الماء مفتوح. • تأكد من ضغط الماء.
5E	• نظّف المصفاة من المخلفات. • تأكد من تركيب خرطوم التصريف تركيبًا صحيحًا.
UE	• حمل الغسيل غير متوازن. قم بإعادة توزيع الحمل. افي حالة غسيل قطعة واحدة من الملابس، مثل رداء حمام أو جينز، قد لا تكون نتيجة التنشيف النهائي مرضية، وتظهر رسالة خطأ في إطار العرض"UE"في إطار العرض.
3E	• اتصل بخدمة ما بعد البيع.
PoF	بعد إيقاف تشغيل الغسالة وتشغيلها مرة أخري نظرا لانقطاع التيار الكهربائي، تومض رسالة "PoF" التي تدل على وجود خطأ: • إذا قمت بالضغط على الزر **تشغيل/إيقاف** يتم إعادة تشغيل الدورة التي تم تخزينها تلقائياً بسبب انقطاع التيار الكهربائي. • إذا قمت بإيقاف تشغيل الغسالة، سيتم إزالة الدورة التي تم تخزينها.

بالنسبة للأكواد التي لم تذكر أعلاه، أو في حالة عدم مساهمة الحل المقترح في حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لـ Samsung.

WD8122CVB-02574P_AR.indd 30 6/5/2008 6:43:31 PM

جدول الدورة

جدول الدورة

(●خيار المستخدم)

البرنامج	الحمل الأقصى (كجم)	مسحوق الغسيل والمواد الإضافية			درجة الحرارة (القصوى) °م		عدد دورات الدوران في الدقيقة (الحد الأقصى)	تأجيل الإنهاء	الماء (ℓ)	الكهرباء (كيلو وات في الساعة)
		الغسيل البدائي	الغسيل	منعم الأقمشة	الافتراضية	القصوى				
قطن	١٢	●	نعم	●	٦٠	٦٠	١٢٠٠	●	١٠٦	٠,٦٥
غليان	٦	●	نعم	●	٩٥	٩٥	٨٠٠ (١٢٠٠)	●	١٠٥	٣,٥٥
سريع	٥	-	نعم	●	٤٠	٤٠	٨٠٠ (١٢٠٠)	●	٧٠	٠,٦٨
منشفة	٥	●	نعم	●	٤٠	٩٥	٦٠٠ (٨٠٠)	●	١١٠	٠,٨٥
بطانية	طبقة واحدة (بوزن ٣ كجم)	●	نعم	●	٣٠	٤٠	٨٠٠	●	٩٠	٠,١٨
صوف	٤	-	نعم	●	٣٠	٤٠	٦٠٠	●	٨٠	٠,٤٢
تنظيف الحوض	-	-	نعم	-	٤٠	٤٠	٦٠٠	●	٥٦	٠,٩١

١. تستغرق الدورة "غسيل بدائي" مدة أطول بحوالي ١٥ دقيقة.
٢. تم قياس بيانات مدد الدورات وفقاً للظروف المنصوص عليها في مقياس IEC 60456/EN 60456.
٣. قد يختلف الاستهلاك في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.

WD8122CVB-02574P_AR.indd 31 6/5/2008 6:43:31 PM

الملحق

جدول العناية بالأقمشة

توفر الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل، تبييض، تجفيف، وكي، وتنظيف جاف إذا لزم الأمر.
يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

مواد مقاومة		يمكن الكي عند ١٠٠°م بحد أقصى	
أقمشة رقيقة		يحظر الكي	
يمكن الغسيل عند ٩٥°م		يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة	
يمكن الغسيل عند ٦٠°م		التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R113 فقط	
يمكن الغسيل عند ٤٠ درجة مئوية		التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط	
يمكن الغسيل عند ٣٠ درجة مئوية		يحظر استخدام التنظيف الجاف	
تغسل باليد		تجفف وهي مفرودة	
تنظيف جاف فقط		يمكن تعليقها لتجف	
يمكن استخدام مادة تبييض مع الماء البارد		تجفيف الملابس وهي معلقة على حمالة	
يحظر استخدام مادة تبييض		تجفيف بالتدوير، حرارة عادية	
يمكن الكي عند ٢٠٠°م بحد أقصى		تجفيف بالتدوير، حرارة خفيفة	
يمكن الكي عند ١٥٠°م بحد أقصى		يحظر تجفيفها بالتدوير	

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر التيار الكهربائي. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفّر الماء والكهرباء من خلال إجراء الغسيل على حمولات كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

إعلان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية EC directive 93/68 و EN Standard 60335.

WD8122CVB-02574P_AR.indd 32 6/5/2008 6:43:34 PM

المواصفات

النوع		غسالة ملابس أمامية التحميل
الأبعاد		العرض ٦٥٠ م × العمق ٧٧٠ م × الارتفاع ٩٤٠ م
ضغط الماء		٥٠ ~٧٨٠ كيلوباسكال
الوزن		٩٧ كجم / ١٠٤ كجم
سعة الغسيل والتنشيف		١٢ كجم (غسيل جاف)
سعة التجفيف		٧,٠ كجم
استهلاك الطاقة	الغسيل	١٥٠ وات
	الغسيل والتسخين	٢٢٠٠ وات
	التجفيف	٢١٠٠ وات
كمية الماء		١٠٦ لتر
دورات التنشيف	الطراز	WD8122CVW, WD8122CVB, WD8122CVD, WD8122CVC
	لفة في الدقيقة	١٢٠٠ لفة في الدقيقة

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

WD8122CVB-02574P_AR.indd 33 6/5/2008 6:43:34 PM

مذكرة

مذكـرة

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
U.A.E	800-SAMSUNG (726-7864) 8000-4726	www.samsung.com

كود رقم. DC68-02574P_AR